

Pilot Operating Handbook



Revision 1.50

Effective Date:

7/12/2011

Pilot Operating Handbook

This manual must be on the airplane board during operation. This manual contains information which must be provided to the pilot and also contains supplementary information provided.

This aircraft must be operated in compliance with the information and limitations stated in this manual.

Table of Contents

1. Introduction	2
SECTION 2 - LIMITATIONS AND MARKINGS	8
SECTION 3 - EMERGENCY PROCEDURES	20
SECTION 4 - NORMAL PROCEDURES	28
SECTION 5 - PERFORMANCE	43
SECTION 6 - WEIGHT AND BALANCE	59
SECTION 7 - AIRPLANE AND SYSTEM DESCRIPTION	68
SECTION 8 - END USER LICENSE AGREEMENT	81

1. Introduction

1.1 Pilot Responsibility

There are inherent risks in participating in aviation activities, these risks are significant, up to and potentially including death. Operators and passengers of recreational aviation aircraft, by participation, accept the risks inherent in such participation of which the ordinary prudent person is or should be aware. Pilots and passengers have a duty to exercise good judgment and act in a responsible manner while using the aircraft and to obey all oral or written warnings, or both, prior to and/or during use of the aircraft.

This Aircraft Operating Instructions has been prepared to provide pilots and instructors with information for safe and efficient operation of the SportStar MAX airplane. It also contains supplementary information considered to be important by the airplane manufacturer.

1.2 Certification basis

SportStar MAX complies with the ASTM F2245-07a Standard Specification for Design and Performance of a Light Sport Airplane, issued by ASTM International Committee F37. IFR version complies with FAR 91.205 requirements, as well as with F2245 Annex A3 Additional Requirements for Light Sport Airplanes Operated Under Instrument Flight Rules, as known till

1.3 Warnings, Cautions, Notes

The following information applies to warnings, cautions and notes used in the Aircraft Operating Instructions:

WARNING

MEANS THAT NON-OBSERVATIONS OF THE CORRESPONDING PROCEDURE LEADS TO AN IMMEDIATE OR IMPORTANT DEGRADATION OF THE FLIGHT SAFETY.

CAUTION

MEANS THAT NON-OBSERVATIONS OF THE CORRESPONDING PROCEDURE LEADS TO A MINOR OR TO A MORE OR LESS LONG TERM DEGRADATION OF THE FLIGHT SAFETY.

NOTE

Draws the attention to any special item not directly related to safety but which is important or unusual.

1.4 Descriptive data

1.4.1 AIRPLANE DESCRIPTION

SportStar MAX airplane is a metal-composite low-wing monoplane of semimonocoque structure with two side by side seats and steerable nose wheel landing gear.

For further description see Section 7 - Airplane and system description.

1.4.2 POWERPLANT

The standard powerplant consists of ROTAX 912ULS (100 hp) engine and ground adjustable, 3-bladed, WOODCOMP KLASSIC 170/3/R propeller.

IFR version is fitted with certified ROTAX 912S2 engine and ground adjustable, 3-bladed, composite Warpdrive CF prop, with Nickel protection of blade leading edges.

For further description see Section 7 - Airplane and system description.

1.4.3 MAIN TECHNICAL DATA

Wing

Span	28.37 ft
Area	112.7 sq.ft
MAC depth	4.1 ft
Wing loading	11.71 lbs/sq.ft
Aileron area	2.62 sq.ft
Flap area	5.60 sq.ft

Fuselage

Length	19.62 ft
Width	3.55 ft
Height	8.12 ft
Cockpit Max. Width	3.9 ft

Horizontal Stabilizer

Span	8.20 ft
HTU Area	20.88 sq.ft
Elevator area	8.40 sq.ft

Vertical Stabilizer

Height	4.21 ft
VTU Area	10.93 sq.ft
Rudder area	4.67 sq.ft

Landing Gear

Wheel track	6.39 ft
Wheel base	4.43 ft
Wheel diameter	15 in

1.4.1 THREE-VIEW DRAWING

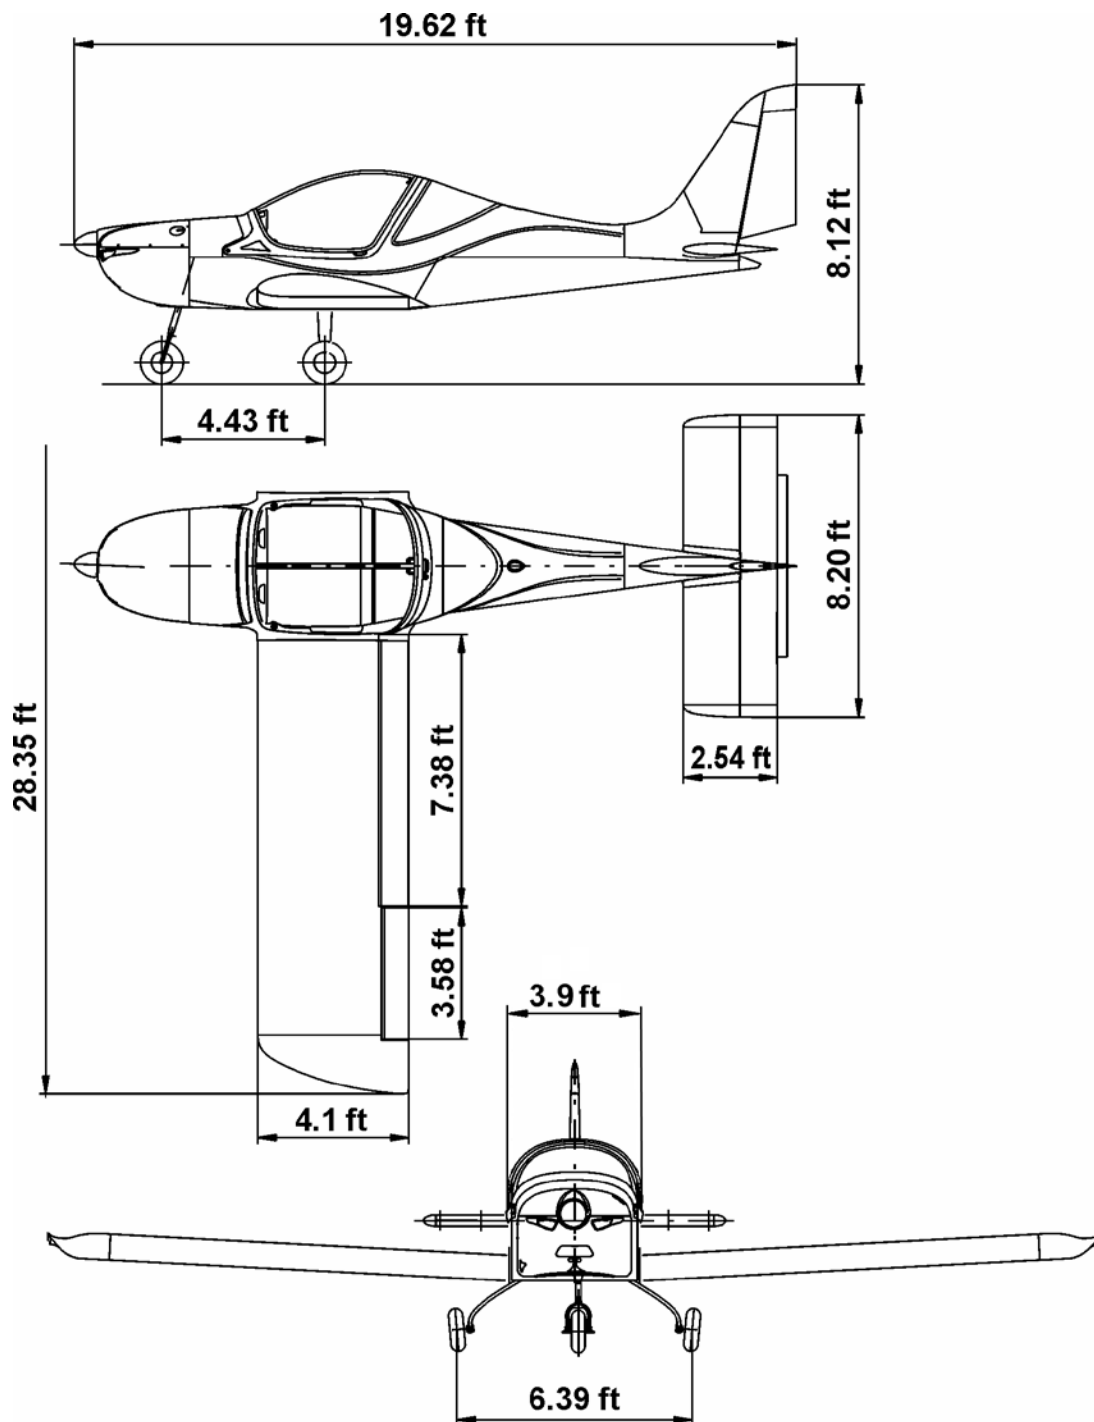


Figure 1-1

1.5 Definitions And Abbreviations

NOTE

The abbreviations on placards in the airplane cockpit, are printed in **BOLD CAPITAL LETTERS** in the text of this Aircraft Operating Instructions.

ACCU	accumulator
ALT ENC	encoding altimeter
ATC	air traffic control
bar	1 bar = 100 kPa
BEACON	anti-collision beacon
°C	Degrees Celsius
CAS	calibrated airspeed
CLOCK	aircraft clock
ft	foot 1 ft = 0.305 m
GPS	global positioning system
HTU	horizontal tail unit
IAS	indicated airspeed
IC	intercom
IFR	instrument flight rules
ISA	international standard atmosphere
kg	kilogram
KIAS	indicated airspeed in knots
KCAS	calibrated airspeed in knots
mph	miles per hour
mph CAS	calibrated airspeed in miles per hour
km/h CAS	calibrated airspeed in km/h
kts	knots 1 kt = 1.852 km/h
lbs	pounds 1 lb = 0.45 kg
m	meter
MAC	mean aerodynamic chord
max.	maximum
min.	minimum or minute
mm	millimeter
m/s	meter per second
OAT	outside air temperature
OFF	system is switched off or control element is in off-position
ON	system is switched on or control element is in on-position
Pa	Pascal 1Pa = 1N/m ²
PSI	pound per sq.in (1PSI = 6.89 kPa)
RPM	revolutions per minute
RWY	runway
sq.ft	square foot
sq.m	square meter
V _A	maneuvering airspeed
V _{FE}	maximum flap extended speed - flaps in 50° position
VFR	visibility flight rules
V _{LOF}	airplane lift-off speed
V-METER	voltmeter
V _{NE}	never exceed speed

V_{NO}	maximum structural cruising speed
V_{SO}	stall speed with wing flaps in 50° position
V_{S1}	stall speed with wing flaps in 0° position
VTU	vertical tail unit
V_X	best angle-of-climb speed
V_Y	best rate-of-climb speed
XPDR	transponder

Intentionally Left Blank

SECTION 2 - LIMITATIONS AND MARKINGS

2.1	Introduction	9
2.2	Airspeed	9
2.3	Airspeed indicator marking	10
2.4	Powerplant	11
2.5	Powerplant instrument marking	12
2.6	Miscellaneous instrument marking	12
2.7	Weight	12
2.8	Centre of gravity	12
2.9	Approved Maneuvers	13
2.10	Maneuvering Load Factors	13
2.11	Flight crew	13
2.12	Operation Types	14
2.13	Fuel	15
2.14	Oil	16
2.15	Maximum number of passengers	16
2.16	Other limitations	16
2.17	Limitation placards	17

2.1 Introduction

Section 2 contains operation limitation, instrument marking and basic placards necessary for safe operation of airplane and its engine, standard systems and equipment.

Limitation for optional systems and equipment are stated in section 9 - Supplements.

2.2 Airspeed

Airspeed limitations and their meaning for operation are stated in the table below:

Speed		KIAS	mph IAS	Meaning
V _{NE}	Never exceed speed	146	168	Do not exceed this speed in any operation.
V _{NO}	Maximum structural cruising speed	115	132	Do not exceed this speed, with exception of flight in smooth air, and even then only with increased caution.
V _A	Maneuvering speed	90	106	Do not make full or abrupt control movement above this speed, because under certain conditions the aircraft may be overstressed by full control movement.
V _{FE}	Maximum flap extended speed	70	81	Do not exceed this speed with the given flap setting.

2.3 Airspeed indicator marking

Airspeed indicator markings and their color-code significance are shown in the table below:

Marking	Range		Meaning
	KIAS	mph IAS	
Red line	37	43	V_{S0} at maximum weight (flaps in landing position 50°)
White arc	37 - 70	44 – 81	Operating range with extended flaps. Lower limit- V_{S0} at maximum weight (flaps 50°) Upper limit - V_{FE}
Green arc	38 - 115	49 – 132	Normal operation range Lower limit - V_{S1} at maximum weight (flaps 0°) Upper limit - V_{NO}
Yellow arc	115 - 146	132 - 168	Maneuvers must be conducted with caution and only in smooth air
Red line	146	168	Maximum speed for all operations - V_{NE}

2.4 Powerplant

Engine manufacturer:	Bombardier-Rotax GMBH	
Engine type:	ROTAX 912 ULS (S2 for IFR version)	
Power:	maximum take-off	73.5 kW / 100 HP
	maximum continuous	69 kW / 95 HP
Engine speed:	maximum take-off	5800 RPM max. 5 minutes
	maximum continuous	5500 RPM
	idle	1400 RPM
Cylinder head temperature:	maximum	275 °F
Oil temperature:	maximum	266 °F
	optimum operation	190 - 230 °F
Oil pressure:	maximum	102 PSI
	minimum	12 PSI
	optimum operation	29 - 73 PSI
Fuel pressure:	minimum	2.2 PSI
Fuel grades:	see 2.13,	
Oil grades:	see 2.14,	
Reducer gear ratio:	2.43 : 1	
Propeller:	Standard installed:	IFR version:
Prop manufacturer:	WOODCOMP s.r.o.	Warpdrive
Propeller type:	KLASSIC 170/3/R	Warpdrive CF Nickel protection of blade leading edges
	3 blade	3-bladed, composite
	composite ground adjustable	Ground adjustable
Propeller diameter:	68 in	68 in
Maximum prop speed:	2600 RPM	2600 RPM

NOTE

If installed a different propeller type - see section 9 - Supplements for propeller limitations.

2.5 Powerplant Instrument Marking

The color-code of instruments is shown in the following table:

Instrument	Units	Red line	Green arc	Yellow arc	Red line
		Lower limit	Normal operation range	Caution range	Upper limit
RPM indicator	RPM	-	1400 - 5500	5500 - 5800	5800
Oil temperature indicator	°F	-	190 - 230	120 - 190 230 - 266	266
Oil pressure indicator	PSI	12	29 - 73	12 - 29 73 - 102	102
Cylinder head temperature	°F	-	-	-	275

2.6 Miscellaneous instrument marking

There are not other instruments with color marking.

2.7 Weight

Empty weight (average equipment)	740 lbs ± 2 %
Maximum take-off weight	1320 lbs
Maximum landing weight	1320 lbs
Maximum weight in baggage compartment	55 lbs

WARNING

DO NOT EXCEED MAXIMUM WEIGHTS! THEIR EXCEEDING LEADS TO AIRPLANE OVERLOADING AND TO DEGRADATION OF FLIGHT CHARACTERISTICS AND DETERIORATION OF MANOEUVRABILITY.

2.8 Centre of gravity

Empty airplane C.G. position (standard equipment)	20 ± 2 % MAC
Operating C.G. range	20 to 34 % MAC

Reference datum is the wing leading edge.

2.9 Approved Maneuvers

SportStar MAX airplane is approved to perform the following maneuvers:

- steep turns up to bank angle of 60°
- climbing turns
- lazy eights
- stalls (except for steep stalls)
- normal flight maneuvers

WARNING

AEROBATICS AS WELL AS INTENTIONAL SPINS ARE PROHIBITED!

2.10 Maneuvering Load Factors

Maximum positive load factor	4.0
Maximum negative load factor	-2.0

2.11 Flight crew

Minimum crew	1 pilot
Minimum weight of crew	121 lbs

Maximum weight of crew acc. to chapter 6.

WARNING

DO NOT EXCEED MAXIMUM WEIGHTS! THEIR EXCEEDING LEADS TO AIRPLANE OVERLOADING AND TO DEGRADATION OF FLIGHT CHARACTERISTICS AND DETERIORATION OF MANOEUVRABILITY.

2.12 Operation Types

The airplane is approved for VFR daylight flights.

WARNING

NIGHT FLIGHTS ACCORDING TO VFR, FLIGHTS ACCORDING TO IFR (BY INSTRUMENTS) ARE APPROVED ONLY WHEN INSTRUMENTATION REQUIRED FOR SUCH FLIGHTS IS INSTALLED AND FLIGHT PERFORMED BY A PILOT WITH APPROPRIATE RATING!

NOT AUTHORIZED FOR FLIGHT INTO KNOWN OR FORECAST POSSIBLE ICING CONDITIONS.

NOT AUTHORIZED FOR FLIGHT WITHIN 25 MILES OF KNOWN LIGHTNING OR THUNDERSTORMS.

2.121 INSTRUMENTS AND EQUIPMENT FOR DAY VFR FLIGHTS:

- 1 Airspeed indicator (the color marking according to par. 0)
- 1 Sensitive barometric altimeter
- 1 Magnetic compass
- 1 Fuel gauge indicator
- 1 Oil temperature indicator
- 1 Oil pressure indicator
- 1 Cylinder head temperature indicator
- 1 Engine speed indicator
- 1 Safety harness for every used seat

2.122 INSTRUMENTS AND EQUIPMENT FOR NIGHT VFR FLIGHTS:

F 2245 Annex 2 LSA to be flown at night

2.123 INSTRUMENTS AND EQUIPMENT FOR IFR FLIGHTS:

FAR 91.205 and F2245 Annex 3 Additional Requirements for Light Sport Airplanes Operated Under Instrument Flight Rules, as proposed till 1.1.2009.

Refer to Supplement IFR to this standard Aircraft Operating Instructions

CAUTION

ADDITIONAL EQUIPMENT NECESSARY FOR AIRPLANE OPERATION IS GIVEN IN APPROPRIATE OPERATION REGULATION OF AIRPLANE OPERATOR'S COUNTRY.

2.13 Fuel

The following fuels can be used :

	Usage / Description	
	912 UL / A / F	912 ULS / S
MOGAS		
European standard	EN 228 Normal ¹⁾	
	EN 228 Super ¹⁾	EN 228 Super ²⁾
	EN 228 Super plus ¹⁾	EN 228 Super plus ²⁾
Canadian standard	CAN/CGSB3.5 Quality 1 ³⁾	CAN/CGSB3.5 Quality 3 ⁴⁾
US standard	ASTM D4814	ASTM D4814
AVGAS		
US standard	AVGAS 100 LL (ASTM D910)	AVGAS 100 LL (ASTM D910)

¹⁾ min. ROZ 90

²⁾ min. ROZ 95

³⁾ min. AKI* 87

⁴⁾ min. AKI 91

AVGAS 100LL places greater stress on the valve seats due to its high lead content and forms increased deposits in the combustion chamber and lead sediments in the oil system. Thus it should only be used in case of problems with vapor lock or when other types of gasoline are unavailable.

- **CAUTION:** Use only fuel suitable for the respective climatic zone.
- ◆ **NOTE:** Risk of vapour formation if using winter fuel for summer operation.
- **CAUTION:** Obey the latest edition of Service Instruction SI-912-016 for the selection of the correct fuel.

Fuel tank volume (each)	15.85 U.S. gallons
Total	31.7 U.S. gallons
Usable fuel	31.2 U.S. gallons
Unusable fuel	0.5 U.S. gallons (0.25 US gal per tank)

NOTE

It is not recommended to fully tank the fuel tanks. Due to fuel thermal expansion keep about 2.11U.S. gallons of free space in the tank to prevent fuel bleed through the vents in the wing tips thus preventing environmental contamination. This should be adhered especially when cold fuel from an underground tank is tanked.

2.14 Oil

Performance classification SF, SG according to API

Oil volume:

- minimum 0.53 U.S. gallons
- maximum 0.79 U.S. gallons

2.15 Maximum Number Of Passengers

Maximum number of passengers including pilot 2

2.16 Other limitations

SMOKING IS PROHIBITED on the airplane board.

PASSENGER NOTICE

This aircraft conforms to ASTM Consensus Standards of airworthiness developed and maintained by the aviation community under ASTM Technical Committee F37.

PASSENGER WARNING !

This aircraft was manufactured in accordance with Light Sport Aircraft airworthiness standards and does not conform to standard category airworthiness requirements.


2.17 Limitation Placards

The following placards are located on the instrument panel:



**BEFORE TAKE-OFF PUSH CANOPY HANDLE UP
TO CHECK CANOPY FULL CLOSING**

The following placards are located on the the tilting canopy:

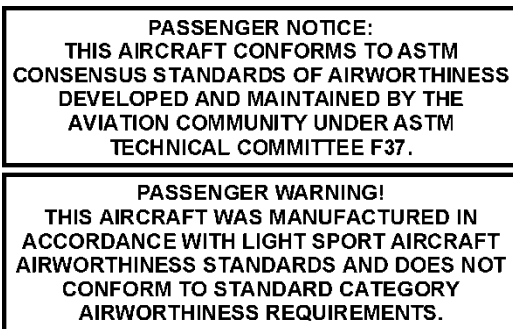

**PASSENGER NOTICE:
THIS AIRCRAFT CONFORMS TO ASTM
CONSENSUS STANDARDS OF AIRWORTHINESS
DEVELOPED AND MAINTAINED BY THE
AVIATION COMMUNITY UNDER ASTM
TECHNICAL COMMITTEE F37.**

**PASSENGER WARNING!
THIS AIRCRAFT WAS MANUFACTURED IN
ACCORDANCE WITH LIGHT SPORT AIRCRAFT
AIRWORTHINESS STANDARDS AND DOES NOT
CONFORM TO STANDARD CATEGORY
AIRWORTHINESS REQUIREMENTS.**

This placard is located on the top of fixed rear canopy:



**CANOPY IS UNLOCKED IF A LATCH
IS VISIBLE UNDER THE GLASS**

NOTE


For painted top of the rear glass the latch is visible when looking sideways from under the painted area.

These placards are located on the tip-up canopy close to rear guide pins:



**CAUTION!
FINGERS OFF
WHEN CLOSING
THE CANOPY!**

The following placard is located in the baggage compartment:

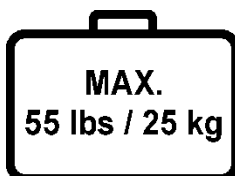

**MAX.
55 lbs / 25 kg**

The following placard is located behind the baggage compartment:



It prohibits use of that place for additional stowage due to airplane aft C.G. limit.

The following placards are located on sides of the tip-up canopy:

Day VFR airplane

**This Light Sport Aircraft has been approved only
for VFR day flights under no icing conditions.**

Or (Night VFR airplane)

**This Light Sport Aircraft has been approved only
for day/night VFR flights under no icing conditions.**

or (IFR airplane)

**This Light Sport Aircraft has been approved
by the Manufacturer for IFR flights with the
following limitations:
Not authorized for IFR flights into known
or forecast possible icing conditions.
Not authorized for IFR flights within 25
miles**

and (all versions)

Aerobatics and intentional spins are prohibited!	
AIRSPEED IAS	
Never exceed	146 kts
Manoeuvring	90 kts
Max. Flap Extended	70 kts
Stalling	37 kts
ENGINE SPEED	
Max. Take-off (max. 5 min.)	5800 rpm
Max. Continuous	5500 rpm
Idling	1400 rpm
Unusable quantity of fuel	0.5 USgal

Aerobatics and intentional spins are prohibited!	
AIRSPEED IAS	
Never exceed	168 MPH
Manoeuvring	106 MPH
Max. Flap Extended	81 MPH
Stalling	44 MPH
ENGINE SPEED	
Max. Take-off (max. 5 min.)	5800 rpm
Max. Continuous	5500 rpm
Idling	1400 rpm
Unusable quantity of fuel	0.5 USgal

LOAD LIMITS								
Max.take-off weight		1320		lbs				
Empty weight		700		lbs				
Max.baggage weight		55		lbs				
PERMITTED CREW WEIGHT							[lbs]	
Fuel quantity		U.S.gal.	30,0	25,0	20,0	15,0	10,0	5,0
Baggage weight	max. 55 lbs		385	415	445	475	505	535
	1/2 28 lbs		412	442	472	502	532	562
	No baggage		440	470	500	530	560	590
Fuel reserve							2 U.S. gallons	

NOTE

The values stated on the placard "LOAD LIMITS" are valid for the empty weight of the airplane with average equipment. The placard with values valid for the actual empty weight of the airplane will be placed in the cockpit.

Other placards and labels are shown in Aircraft Maintenance and Inspection Procedures.

This Space Left Intentionally Blank

SECTION 3 - EMERGENCY PROCEDURES

3.0	Introduction	21
3.1	Speeds for Performing Emergency Procedures	21
3.2	Engine Failure	21
3.3	Engine Starting in Flight	22
3.4	Engine Fire.....	23
3.41	Fire On The Ground	23
3.41	Fire During Takeoff	23
3.41	Fire In Flight	24
3.5	Fire In The Cockpit.....	24
3.6	Gliding Flight	25
3.7	Emergency Landing	25
3.8	Unintentional Spin Recovery.....	26
3.9	Other Emergency Procedures	26
3.91	Vibration.....	26
3.92	Carberator Icing	27

3.0 Introduction

Section 3 describes operations and procedures for emergency situation solutions that could possibly occur during airplane operation.

3.1 Speeds for Performing Emergency Procedures

Airspeed for the best gliding ratio (flaps retracted)	59 KIAS (68 mph IAS)
Precautionary landing(engine running, flaps 50°)	55 KIAS (63 mph IAS)
Emergency landing (engine stopped, flaps 50°)	55 KIAS (63 mph IAS)

3.2 Engine Failure

3.2.1 ENGINE FAILURE AT TAKE-OFF RUN

- | | | |
|----|---------------|--------------|
| 1. | THROTTLE knob | IDLE |
| 2. | Brakes | AS NECESSARY |
| 3. | FUEL SELECTOR | OFF |
| 4. | Ignition | OFF |
| 5. | Master switch | OFF |

3.2.1 ENGINE FAILURE AT TAKE-OFF

- Gliding speed:

with flaps in take-off position (15°)	55 KIAS (63 mph IAS)
with flaps retracted (0°)	59 KIAS (68 mph IAS)

- Altitude:

Land in take-off direction if below 150 ft

Land in take-off direction or you can perform turn up to 90° if altitude is 150 - 400 ft

You can try start engine if altitude is above 250 ft

You can perform turn up to 180° if altitude is above 400 ft

- | | | |
|----|---------------|-----------|
| 3. | THROTTLE knob | IDLE |
| 4. | FLAPS | AS NEEDED |
| 5. | FUEL SELECTOR | OFF |
| 6. | Ignition | OFF |

- | | |
|--------------------|-----------------|
| 7. ATC | REPORT |
| 8. MASTER SWITCH | OFF |
| 9. After touchdown | BRAKE AS NEEDED |

3.2.3 ENGINE FAILURE IN FLIGHT

- | | |
|------------------|-----------------------------------|
| 1. Gliding speed | 59 KIAS (68 MPH IAS) |
| 2. Altitude | TAKE A DECISION AND CARRY OUT: |
| | - ENGINE STARTING IN FLIGHT - 3.4 |
| | - EMERGENCY LANDING - 3.8.1 |

3.3 Engine starting at flight

NOTE

It is possible to start the engine by means of the starter within the whole range of operation speeds as well as flight altitudes. The engine started up immediately after switching the ignition to START position.

If the engine is shut down, the altitude loss during engine starting can reach up to 1000 ft.

- | | |
|-------------------------------------|--|
| 1. Gliding speed | 59 KIAS (68 MPH IAS) |
| 2. Altitude | CHECK |
| 3. MASTER SWITCH | ON |
| 4. Unnecessary electrical equipment | SWITCH OFF |
| 5. FUEL SELECTOR | LEFT |
| 6. CHOKE | AS NEEDED |
| 7. THROTTLE knob | IDLE (CHOKE OPENED) OR INCREASED IDLE (CHOKE CLOSED) |

The propeller IS rotating:

- | | |
|-------------|------|
| 8. IGNITION | BOTH |
|-------------|------|

The propeller is NOT rotating:

- | | | |
|-----|--|-------|
| 9. | IGNITION | START |
| 10. | If engine starting does not occur, increase gliding speed up to 108 KIAS (124 mph IAS) (see NOTE), so that air-flow turns the propeller and engine will start. | |
| 11. | IGNITION | BOTH |
| 12. | If engine starting is unsuccessful, then continue according to paragraph 3.8.1 Emergency landing. | |

3.4 Engine fire

3.4.1 FIRE ON THE GROUND

- | | | |
|----|-----------------------------|-------|
| 1. | FUEL SELECTOR | OFF |
| 2. | BRAKES | BRAKE |
| 3. | THROTTLE knob | FULL |
| 4. | HOT AIR knob (if installed) | PUSH |

After the engine stops:

- | | | |
|----|------------------------------------|-------|
| 5. | IGNITION | OFF |
| 6. | MASTER SWITCH | OFF |
| 7. | Airplane | LEAVE |
| 8. | Manual extinguisher (if available) | USE |

3.4.2 FIRE DURING TAKE-OFF

- | | | |
|----|------------------------------|----------------------|
| 1. | FUEL SELECTOR | OFF |
| 2. | THROTTLE knob | FULL |
| 3. | Airspeed | 65 KIAS (75 MPH IAS) |
| 4. | HOT AIR knob (if installed) | PUSH |
| 5. | COLD AIR knob (if installed) | PUSH |

After the engine stops:

- | | | |
|-----|------------------------------------|----------------------|
| 6. | Gliding speed | 55 KIAS (63 MPH IAS) |
| 7. | IGNITION | OFF |
| 8. | MASTER SWITCH | OFF |
| 9. | Land | |
| 10. | Airplane | LEAVE |
| 11. | Manual extinguisher (if available) | USE |

3.4.3 FIRE IN FLIGHT

- | | |
|---------------------------------|----------------------|
| 1. FUEL SELECTOR | OFF |
| 2. THROTTLE knob | FULL |
| 3. HOT AIR knob (if installed) | PUSH |
| 4. COLD AIR knob (if installed) | PUSH |
| 5. Gliding speed | 59 KIAS (68 MPH IAS) |
| 6. IGNITION | OFF |
| 7. ATC | REPORT IF POSSIBLE |
| 8. MASTER SWITCH | OFF |

NOTE

For extinguishing the engine fire, you can perform slip under assumption that you have sufficient altitude and time.

WARNING

AFTER EXTINGUISHING THE ENGINE FIRE START ENGINE ONLY IF IT NECESSARY TO SAFE LANDING. FUEL LEAK IN ENGINE COMPARTMENT COULD CAUSE FIRE AND FIRE COULD RESTORE AGAIN.

- | | |
|---|------------------------------|
| 9. If you start engine again, switch off all switches, switch on the Master switch, and then subsequently switch on only equipment necessary to safe landing. | |
| 10. Emergency landing | CARRY OUT ACCORDING TO 3.8.1 |
| 11. Airplane | LEAVE |
| 12. Manual extinguisher (if available) | USE AS NEEDED |

3.5 Fire in the cockpit (if manual extinguisher available aboard)

- | | |
|---|---|
| 1. Fire source | IDENTIFY |
| 2. MASTER SWITCH in case that the source of fire is electrical equipment. | OFF |
| 3. Manual extinguisher | USE |
| 4. After fire is extinguished | AERATE THE COCKPIT
OPEN EYE-BALL VENTS |
| 5. Carry out safety landing according to 3.8.2 | |

WARNING
NEVER AGAIN SWITCH THE DEFECTIVE SYSTEM ON.

NOTE
If a defective electrical system circuit was detected as the fire source, then switch off appropriate circuit breaker and switch over Master switch to ON position.

3.6 Gliding Flight

NOTE
Gliding flight can be used for example in case of engine failure.

Wing flaps position	Retracted (0°)	Take-off (15°)
Airspeed	59 KIAS (68 mph IAS)	55 KIAS (63 mph IAS)

3.7 Emergency landing

3.7.1 EMERGENCY LANDING - WITH NON-OPERATING ENGINE

- | | |
|-------------------|---------------------------------------|
| 1. Airspeed | 59 KIAS (68 MPH IAS) |
| 2. Landing area | CHOOSE, determine wind direction |
| 3. Safety harness | TIGHTEN |
| 4. Flaps | LANDING POSITION (50°) |
| 5. Airspeed | 60 KIAS (69 MPH IAS) |
| 6. Radio | NOTIFY situation to ATC (if possible) |
| 7. FUEL SELECTOR | OFF |
| 8. Ignition | OFF |
| 9. Master switch | OFF before touchdown |

3.7.2 SAFETY LANDING- WITH ENGINE OPERATING

- | | |
|---------------------|---|
| 1. Area for landing | CHOOSE, determine wind direction, carry out passage flight with speed of 59 KIAS (68 mph IAS), flaps in take-off position (15°) |
| 2. Radio | NOTIFY situation to ATC (if possible) |
| 3. Safety harness | TIGHTEN |
| 4. Flaps | LANDING POSITION (50°) |
| 5. Airspeed | 60 KIAS (69 MPH IAS) |
| 6. Landing | CARRY OUT |

3.7.3 LANDING WITH BURST TIRE

CAUTION

WHEN LANDING AT HOLDING, KEEP THE WHEEL WITH BURST TIRE ABOVE THE GROUND AS LONG AS POSSIBLE BY MEANS OF AILERONS. IN CASE OF NOSE WHEEL BY MEANS OF ELEVATOR.

1. At running hold airplane direction by means of foot control and brakes

3.7.4 LANDING WITH DAMAGED LANDING GEAR

1. In case of nose landing gear damage touch down at the lowest possible speed and try to keep the airplane on main landing gear wheels as long as possible
2. In case of main landing gear damage touch down at the lowest possible speed and if possible keep direction at running

3.8 Unintentional spin recovery

NOTE

The airplane has not, when using normal techniques of pilotage, tendency to go over to spin spontaneously. Standard procedure of recovery from spin:

- | | |
|------------------|--|
| 1. THROTTLE knob | IDLE |
| 2. CONTROL STICK | AILERONS - NEUTRAL POSITION |
| 3. PEDALS | KICK the rudder pedal push against spin rotation direction |
| 4. CONTROL STICK | PUSH FORWARD and hold it there until rotation stops |
| 5. PEDALS | IMMEDIATELY AFTER ROTATION STOPS, set the rudder to neutral position |
| 6. CONTROL STICK | RECOVER THE DIVE |

CAUTION

ALTITUDE LOSS PER ONE TURN AND RECOVERING FROM THE SPIN IS 500 UP TO 1000 FT.

3.9 Other emergency procedures

3.9.1 VIBRATION

If abnormal vibrations occur on the airplane then:

1. Set engine RPM to the mode in which the vibrations are the lowest
2. Land on the nearest possible airport, possibly perform safety landing according to par. 3.8.2. Safety landing.

3.9.2 CARBURETTOR ICING

Carburetor icing happens when air temperature drop in the carburetor occurs due to its acceleration in the carburetor and further cooling by evaporating fuel. Carburetor icing mostly happens during descending and approaching for landing (low engine RPM). Carburetor icing shows itself by engine power decreasing and by engine temperature increasing.

Recommended procedure for engine power regeneration is as follows:

- | | |
|-----------------------------------|--|
| 1. CARB. PREHEATER (if installed) | ON |
| 2. THROTTLE knob | SET IDLE AND THEN CRUISING POWER AGAIN |

NOTE

Ice coating in the carburetor should be removed by decrease and increase of engine power.

3. If the engine power is not successfully increased, then carry out landing at the nearest suitable airport or, if it is not possible, carry out precautionary landing.

SECTION 4 - NORMAL PROCEDURES

4.1	Introduction	29
4.2	Recommended speeds for normal procedures.....	29
4.2.1	Take-off	29
4.2.2	Landing	29
4.3	Assembly and disassembly.....	29
4.4	Pre-flight check	30
4.5	Normal procedures and checklist	34
4.5.1	Before engine starting	34
4.5.2	Engine starting	34
4.5.3	Before taxiing.....	36
4.5.4	Taxiing	36
4.5.5	Before take-off	36
4.5.6	Take-off	37
4.5.7	Climb	38
4.5.8	Cruise	38
4.5.9	Descent	39
4.5.10	Before landing	40
4.5.11	FINAL	40
4.5.12	Balked landing.....	41
4.5.13	Landing	41
4.5.14	After landing	41
4.5.15	Engine shut-off.....	41
4.5.16	Airplane parking	42

4.1 Introduction

Section 4 describes operations and recommended procedures for normal operation of the airplane. Normal procedures following from system installation and optional equipment, which require supplementation of these Instructions, are shown in section 9 - Supplements.

4.2 Recommended speeds for normal procedures

4.21 TAKE-OFF

Climbing speed up to 50 ft (flaps in take-off pos. - 15°)	57 KIAS (66 mph IAS)
Best rate-of-climb speed V_Y (flaps in take-off pos. - 15°)	57 KIAS (66 mph IAS)
Best rate-of-climb speed V_Y (flaps retracted - 0°)	65 KIAS (74 mph IAS)
Best angle-of-climb speed V_X (flaps in take-off pos. - 15°)	54 KIAS (63 mph IAS)
Best angle-of-climb speed V_X (flaps retracted - 0°)	56 KIAS (65 mph IAS)

4.22 LANDING

Approaching speed for normal landing (flaps in landing position - 50°)	60 KIAS (69 mph IAS)
---	----------------------

4.3 Assembly and disassembly

Description of assembly and disassembly is given in the SportStar MAX Aircraft Maintenance and Inspection Procedures.

4.4 Pre-flight check

Carry out pre-flight check according to the following procedure:

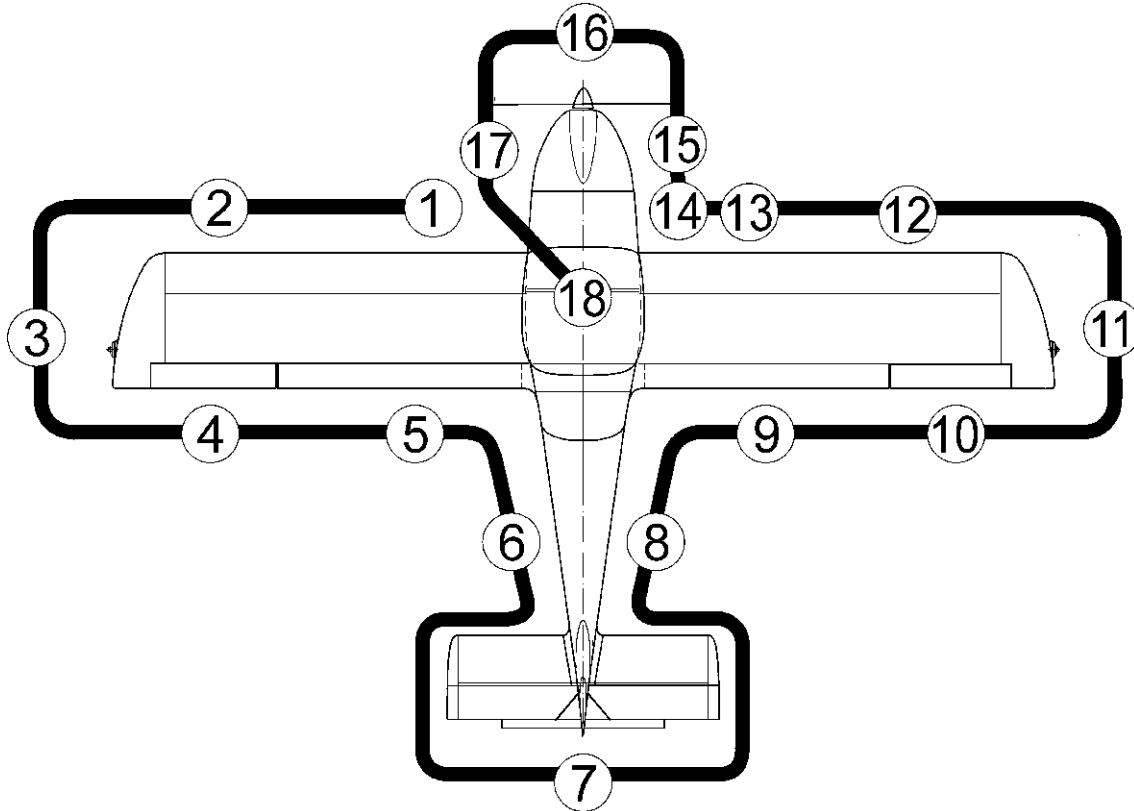


Figure 4-1 Scheme of airplane preflight check

WARNING

CHECK BEFORE PRE-FLIGHT CHECK THAT IGNITION IS SWITCHED OFF!

NOTE

The word "condition", used in procedures of pre-flight check, means visual check of surface, damage, deformation, scratches, attrition, corrosion, icing or other effects decreasing flight safety.

1. Left landing gear leg - check
 - landing gear leg attachment and condition
 - landing gear wheel condition
 - tire condition and inflation
 - condition and attachment of wheel covers
 - ground cable condition (if installed)
2. Left wing - check
 - wing surface condition
 - leading edge condition
 - landing light condition - if installed
 - condition of the Pitot tube
 - draining of fuel tank (see Chapter 8, page 8-6)
 - closing of fuel tank cap
3. Left wing tip - check
 - surface condition
 - attachment check
 - fuel tank vent - cleanness
 - condition and attachment of the position lights and the anticollision beacon - if installed
4. Left aileron - check
 - surface condition
 - condition of trim tab (if installed) and its control (electr.trim)
 - attachment
 - free movement
5. Left wing flap - check
 - surface condition
 - attachment
6. Rear part of fuselage - check
 - surface condition
 - condition of antennas (top and bottom fuselage surface) - if installed

7. Tail units - check
 - tail skid condition
 - surface condition
 - condition of rudder and elevator attachment
 - freedom of rudder and elevator movement
 - condition of trim tab, condition of elevator trim tab control
8. Rear part of fuselage - check
 - surface condition
9. Right wing flap- see 5.
10. Right aileron- see 4. except the trim tab
11. Right wing tip - see 3.
12. Right wing - see 2. except the landing light
 - Alternate pitot tube (IFR airplane)
 - AOA probe (if installed)
13. Right landing gear leg - see 1.
14. Front part of the fuselage - right hand side - check
 - Tip-up canopy attachment and condition
 - condition of the nose landing gear leg
 - nose wheel condition
 - condition of the nose wheel control rods
 - external power socket (if installed)
15. Engine

Checks before the first flight of day - it is necessary to remove upper engine cowling:

 - condition of engine bed
 - condition of engine attachment
 - condition of exhaust system
 - condition of engine cowlings
 - visual check on fuel and electrical system condition

- check on cooling liquid volume in the expansion tank on the engine body (replenish as required up to max. 2/3 of the expansion tank volume)

Checks before every flight:

- cleanness of air intakes
 - check on oil level (between marks - flattenings on the dip stick)
 - check on cooling liquid level in the overflow bottle (volume should be approx. 0.42 pints (0.2 litre))
 - proper closing of the upper cowling
16. Propeller - check
 - attachment
 - condition of blades, hub and spinner
 17. Front part of fuselage - left hand side - check
 - tip-up canopy attachment and condition
 18. Cockpit - check

NOTE

Canopy is unlocked if a latch next to lock is visible under the glass, otherwise it is locked. Unlock it first with key.

- | | |
|--|--------------------|
| 1. MASTER SWITCH | SWITCH ON |
| 2. Check canopy OPEN/CLOSE indication light (or a message on the EFIS display) function | |
| 3. ALL SWITCHES | OFF |
| 4. Instrument equipment | CHECK on condition |
| 5. CHECK on presence of loose object in the cockpit | |
| 6. CHECK on adjusting and securing the rudder pedals (see section 7.3.3) - if installed adjustable rudder pedals | |

WARNING

RIGHT AND LEFT PEDAL OF RUDDER CONTROL MUST BE SET TO THE SAME POSITIONS AND WELL SECURED!

7. AOI and other required documents
check on completeness and validity

4.5 Normal procedures and checklist

4.5.1 BEFORE ENGINE STARTING

- | | |
|--|----------------------|
| 1. Pre-flight check and check on weight and centre of gravity position | DONE |
| 2. External power source (if socket is installed) | CONNECT as necessary |
| 3. Safety harnesses | CHECK, FASTEN |
| 4. CONTROL STICK | FREE |
| 5. RUDDER PEDALS | FREE |
| 6. Wing flaps | FUNCTION CHECK |
| 7. TRIM TAB | FUNCTION CHECK |
| 8. PARKING BRAKE handle (if installed) | RELEASE BRAKES |
| 9. Brakes | FUNCTION CHECK |
| 10. AVIONICS SWITCH | CHECK OFF |
| 11. IGNITION | CHECK OFF |
| 12. Canopy | CLOSE |

5.5.2 ENGINE STARTING

- | | |
|--|---|
| 1. MASTER SWITCH | ON |
| 2. Fuel gauge indicators | CHECK fuel qty. |
| 3. FUEL SELECTOR
Pull the safety button on the fuel selector, turn the handle to the left and then release safety button. Now the handle can be freely moved between left and right position. Safety button prevents unintentionally switch the selector to OFF position. | LEFT |
| 4. Electric fuel pump (if installed) | ON |
| 5. THROTTLE knob | idle |
| 6. Choke | AS NECESSARY (open by pulling up and lock by turning) |
| 7. Space in the propeller area | FREE |
| 8. BEACON (if installed) | ON |
| 9. Brakes | APPLY |
| 10. IGNITION | START (see CAUTION) after starting up BOTH |

CAUTION

ACTIVATE STARTER FOR 10 SEC. AS A MAXIMUM, THEN LET IT COOL DOWN FOR 2 MINUTES.

AFTER STARTING UP ENGINE, DO NOT CARRY OUT SUDDEN RPM CHANGES, AFTER POWER DECREASE WAIT FOR ABOUT 3 S IN ORDER TO REACH CONSTANT RPM BEFORE REACCELERATION.

- | | |
|--------------------------------------|--------------------------------|
| 11. THROTTLE knob | AS NECESSARY (see NOTE) |
| 12. Oil pressure | UP TO 10 SECONDS MIN. PRESSURE |
| 13. GEN, AUX GEN (if inst.) switches | ON |

NOTE

After starting up engine, adjust throttle for smooth engine running at about 2500 RPM. Check oil pressure. Pressure must increase within 10 s. Increase engine RPM until oil pressure is stabilized over 2 bar (29 PSI).

- | | |
|------------------------|--------------|
| 14. Engine instruments | CHECK |
| 15. Choke | AS NECESSARY |
| 16. Engine warm up | SEE NOTE |

NOTE

Begin warming up with engine running at 2000 RPM. for about 2 minutes, continue at 2500 RPM. Warming time depends on outside air temperature until oil temperature reaches 122 °F.

- | | |
|--|-------|
| 17. FUEL SELECTOR | RIGHT |
| Verify proper engine feeding from the right tank for approx. 1 minute. | |
| 18. FUEL SELECTOR | LEFT |

NOTE

Start engine with the fuel selector set to **LEFT**. If you would start the engine with the fuel selector set to **RIGHT** and the left tank is full, than fuel bleed from the left tank vent may occur (and pollute environment) because a fuel return hose is led only into the left tank and returning fuel will overfill the left tank.

- | | |
|--|--|
| 19. External power source (if socket is installed) | If used, give instruction to DISCONNECT it |
| 20. AVIONICS SWITCH | ON |
| 21. Radios/avionics equipment | ON |
| 22. Other electrical equipment | ON as necessary |

4.5.3 BEFORE TAXIING

- | | |
|-------------------------------------|------|
| 1. Transponder (if installed) | STBY |
| 2. Navigation/Anti-collision lights | ON |

4.5.4 TAXIING

- | | |
|---|---------------------|
| 1. THROTTLE knob | AS NECESSARY |
| 2. Brakes | CHECK by depressing |
| 3. Rudder pedals | FUNCTION CHECK |
| 4. Direction of taxiing control by rudder pedals (these are mechanically connected with nose wheel control), possibly by slacking up left and right wheel of the main landing gear. | |

4.5.5 BEFORE TAKE-OFF

- | | |
|-------------------|---------------------|
| 1. Brakes | BRAKE |
| 2. Ignition check | CARRY OUT, see NOTE |

NOTE

Carry out ignition check in the following way :
Set engine speed to 4000 RPM. Switch ignition gradually to L, BOTH, R position and return to BOTH..

RPM drop with one ignition circuit switched off must not exceed 300 RPM. Maximum RPM difference at using one of the L or R circuits is 120 RPM.

- | | |
|-------------------------------------|-------------------------|
| 3. Engine instruments | CHECK |
| 4. Control stick | FREE |
| 5. Wing flaps | TAKE-OFF POS. (15°) |
| 6. Elevator trim | NEUTRAL |
| 7. Aileron trim (if installed) | NEUTRAL |
| 8. Fuel gauge indicator | CHECK on fuel quantity |
| 9. FUEL SELECTOR | CHECK LEFT |
| 10. CARB.R PREHEATER (if installed) | CHECK FUNCTION then OFF |

NOTE

If CARBURETTOR PREHEATER is switched ON, then engine RPM drop reaches approximately 50 RPM

- | | |
|--------------------------------|------------------------------|
| 11. Engine instruments | CHECK |
| 12. Flight instruments | CHECK |
| 13. Radios/avionics | CHECK, SET |
| 14. IGNITION | CHECK BOTH |
| 15. CHOKE | CLOSE (in inserted position) |
| 16. MASTER SWITCH | CHECK ON |
| 17. Safety harnesses | TIGHTEN |
| 18. Canopy | CLOSED |
| 19. Transponder (if installed) | ON OR ALT |

4.5.6 TAKE-OFF

- | | |
|--|-----------------------------------|
| 1. THROTTLE knob | MAX. TAKE-OFF POWER |
| 2. During take-off run smoothly lighten up the nose landing gear until airplane take-off occurs. | |
| 3. Airspeed | 57 KIAS (66 mph IAS) |
| 4. Brakes | BRAKE to stop main wheel rotation |
| 5. After reaching 150 ft , set flaps to retracted pos. (0°) | |
| 6. Trim | AS NECESSARY |

WARNING

TAKE-OFF IS PROHIBITED:

- ✗ IF ENGINE RUNNING IS IRREGULAR
- ✗ IF CHOKE IS OPEN
- ✗ IF VALUES OF ENGINE INSTRUMENTS ARE NOT WITHIN THE REQUIRED RANGE

4.5.7 CLIMB

- | | |
|--------------------------------------|--|
| 1. THROTTLE knob | MAX CONTINUOUS POWER |
| 2. Airspeed | $V_Y = 65$ KIAS (75 mph IAS) for the best rate of climb
or $V_X = 56$ KIAS (64 mph IAS) for the best angle of climb |
| 3. Engine instruments | CHECK |
| 4. Trim | AS NECESSARY |
| 5. Electric fuel pump (if installed) | OFF |

4.5.8 CRUISE

- | | |
|-----------------------|--------------|
| 1. THROTTLE knob | AS NECESSARY |
| 2. Airspeed | MAX 5500 RPM |
| 3. Engine instruments | CHECK |
| 4. Fuel quantity | CHECK |

CAUTION

FUEL GAUGES DISPLAY TRUE FUEL QUANTITY ONLY ON GROUND AND IN A LEVEL FLIGHT. TO READ TRUE FUEL QUANTITY AFTER TRANSITION FROM CLIMB/DESCENT WAIT APPROX. 2 MINUTES TO FUEL TO LEVEL.

NOTE

It is recommended to alternately switch the tanks during cruise to equally consume fuel from both tanks and minimize airplane tendency to bank with unbalanced tanks.

Do not fly with the fuel selector set to RIGHT if the left tank is full to avoid fuel bleed from left tank vent.

When the left tank fuel gauge indicates approx. 1/8 of fuel quantity (needle in the middle between 1/4 and 0) then switch to the right tank to consume remaining fuel and then switch back the left tank to complete the flight at left tank. If the engine conks out due to fuel consumption from either tank, then immediately switch the fuel selector to other tank and engine run will be recovered within 7 seconds.

- | | |
|----------------------------------|--------------|
| 5. CARB.PREHEATER (if installed) | AS NECESSARY |
|----------------------------------|--------------|

4.5.9 DESCENT

- | | |
|----------------------------------|--------------------|
| 1. THROTTLE knob | CHECK AS NECESSARY |
| 2. Airspeed | CHECK AS NECESSARY |
| 3. Trim | AS NECESSARY |
| 4. Engine instruments | CHECK REGULARLY |
| 5. CARB.PREHEATER (if installed) | AS NECESSARY |

CAUTION

AT LONG APPROACHING AND DESCENDING FROM HIGH ALTITUDE IT IS NOT SUITABLE TO REDUCE THROTTLE TO MINIMUM FOR THE REASON OF POSSIBLE ENGINE UNDERCOOLING AND SUBSEQUENT LOSS OF POWER. PERFORM DESCENDING AT INCREASED IDLE AND CHECK OBSERVANCE OF THE ALLOWED VALUES ON ENGINE INSTRUMENTS.

4.5.10 BEFORE LANDING

- | | |
|------------------|-------|
| 1. Fuel quantity | CHECK |
|------------------|-------|

CAUTION

FUEL GAUGES DISPLAY TRUE FUEL QUANTITY ONLY ON GROUND AND IN A LEVEL FLIGHT. TO READ TRUE FUEL QUANTITY AFTER TRANSITION FROM CLIMB/DESCENT WAIT APPROX. 2 MINUTES TO FUEL TO LEVEL.

- | | |
|--------------------------------------|----------------------------|
| 2. FUEL SELECTOR | LEFT |
| 3. Engine instruments | CHECK |
| 4. Brakes | CHECK by depressing pedals |
| 5. Safety harnesses | TIGHTEN |
| 6. Landing area free of obstructions | CHECK |
| 7. CARB.PREHEATER (if installed) | ON |
| 8. Approach speed | CHECK 60 KIAS (69 mph IAS) |
| 9. Flaps | CHECK Take-off pos. (15°) |
| 10. Trim | AS NECESSARY |
| 11. Parking brake (if installed) | CHECK for lever down |

CAUTION

PARKING BRAKE MUST BE RELEASED (LEVER DOWN) TO PREVENT LANDING WITH BRAKED WHEELS.

- | | |
|---------------------------------------|----|
| 12. Electric fuel pump (if installed) | ON |
|---------------------------------------|----|

4.5.11 FINAL APPROACH

- | | |
|----------------------------------|---------------------------------|
| 1. Flaps | CHECK landing pos. (30° or 50°) |
| 2. Maintain airspeed | 60 KIAS (69 mph IAS) |
| 3. Trim | AS NECESSARY |
| 4. CARB.PREHEATER (if installed) | OFF |

4.5.12 BALKED LANDING

- | | |
|------------------------|----------------------------|
| 1. THROTTLE knob | SET max. take-off power |
| 2. Flaps | SET take-off pos. (15°) |
| 3. Airspeed | CHECK 56 KIAS (65 mph IAS) |
| 4. Flaps at 150 ft AGL | SET retracted pos. (0°) |
| 5. Trim | AS NECESSARY |
| 6. THROTTLE knob | SET max. continuous power |
| 7. Instruments | CHECK |
| 8. Climb airspeed | CHECK 65 KIAS (74 mph IAS) |

4.5.13 LANDING

- | | |
|---|--|
| 1. THROTTLE knob | SET idle |
| 2. Touch-down on main landing gear wheels | |
| 3. Brakes | AS NECESSARY after nose landing gear wheel touchdown |

4.5.14 AFTER LANDING

- | | |
|--------------------------------------|-------------------|
| 1. Flaps | RETRACT pos. (0°) |
| 2. Trim | NEUTRAL |
| 3. Landing lights | OFF |
| 4. Transponder | OFF |
| 5. Electric fuel pump (if installed) | OFF |

4.5.15 ENGINE SHUT-OFF

- | | |
|-------------------------------|----------|
| 1. THROTTLE knob | SET idle |
| 2. Engine instruments | CHECK |
| 3. Radios/avionics | OFF |
| 4. AVIONICS SWITCH | OFF |
| 5. Other electrical equipment | OFF |
| 6. IGNITION | OFF |

- | | |
|--|-----|
| 7. Exterior beacon and anti-collision lights | OFF |
| 8. MASTER SWITCH | OFF |

4.5.16 AIRPLANE PARKING

- | | |
|------------------|-----------|
| 1. IGNITION | CHECK OFF |
| 2. MASTER SWITCH | CHECK OFF |
| 3. FUEL SELECTOR | CHECK OFF |

Pull the safety button on the fuel selector, turn the handle to the OFF position and then release safety button. Now the handle is blocked in the OFF position. Safety button prevents unintentionally switch the selector from the OFF position.

- | | |
|---------------------------------|-------|
| 4. PARKING BRAKE (if installed) | SET |
| 5. Canopy | CLOSE |

NOTE

It is recommended to use parking brake (if installed) for short-time parking only, between flights during a flight day. After ending the flight day or at low temperatures of ambient air, do not use parking brake, but use the wheel chocks instead.

SECTION 5 - PERFORMANCE

5.1	Introduction	44
5.2	Approved data	44
5.2.1	Airspeed indicator system calibration	44
5.2.2	Stall speeds	47
5.2.3	Take-off distance	48
5.2.4	Landing distance.....	48
5.2.5	Climb performance.....	49
5.3	Additional information	51
5.3.1	Cruise	51
5.3.2	Horizontal speeds	53
5.3.3	Endurance	55
5.3.4	Balked landing climb	56
5.3.5	Effect on flight performance and characteristics.....	57
5.3.6	Demonstrated crosswind performance	57
5.3.7	Ceiling.....	58
5.3.8	Noise data	58

Introduction

Section 5 provides data for airspeed calibration, stall speeds, take-off performance and additional information, provided by the airplane manufacturer.

The stated performance data has been computed from actual flight tests with the airplane and engine in good condition and using average piloting techniques.

CAUTION

THE PERFORMANCE STATED IN THIS SECTION IS VALID FOR STANDARD POWERPLANT - ROTAX 912 ULS (100 HP) TOGETHER WITH WOODCOMP KLASSIC 170/3/R PROPELLER INSTALLED IN THE AIRPLANE.

FOR ACTUAL PERFORMANCE SEE SECTION 9 - SUPPLEMENTS.

6.1 Approved data

6.1.1 AIRSPEED INDICATOR SYSTEM CALIBRATION

NOTE

Assumed zero instrument error. Valid for airplane take-off weight 1320 lbs (600 kg) and with vortex generators along the whole span of the wing.

This space left intentionally blank

		RETRACTED 0°	TAKEOFF 15°	LANDING I 30°	LANDING II 50°
	KIAS	KCAS	KCAS	KCAS	KCAS
VS0	37		43	42	42
VS1	38	45	44	43	42
	39	46	44	44	43
	40	47	45	45	44
	41	48	46	46	45
	42	48	47	47	46
	43	49	48	48	47
	44	50	49	48	48
	45	51	50	49	48
	50	55	54	53	53
	55	59	58	58	57
	60	63	62	62	62
	65	67	67	66	66
VFE	70	71	71	70	70
	75	75			
	80	80			
	85	84			
VA	90	89			
	95	93			
	100	98			
	105	103			
	110	107			
VNO	115	112			
	120	117			
	125	122			
	130	127			
	135	132			
	140	138			
VNE	146	144			

		RETRACTED	TAKEOFF 15°	LANDING I 30°	LANDING II 50°
	IAS (mph)	CAS (mph)	CAS (mph)	CAS (mph)	CAS (mph)
VS0	43		49	49	48
VS1	44	52	50	50	49
	45	53	51	51	50
	50	57	56	55	54
	55	61	60	59	59
	60	65	64	64	63
	65	69	68	68	67
	70	73	73	72	72
	75	77	77	76	76
	80	81	81	80	80
VFE	81	82	82	81	81
	85	86			
	90	90			
	95	94			
	100	99			
	105	103			
VA	106	104			
	110	108			
	115	113			
	120	117			
	125	122			
	130	127			
VNO	132	129			
	135	132			
	140	137			
	145	142			
	150	147			
	155	152			
	160	157			
	165	162			
VNE	168	166			

6.1.2 STALL SPEEDS

Conditions:

- Wing level stall - engine at idle power
- Turning flight stall - engine at 75% max. continuous power
- Airplane weight: 1320 lbs (600 kg)
- Vortex generators along the whole span of the wing

NOTE

The stated stall speeds are valid for all flight altitudes. Altitude losses shown in the table present max. values determined on the basis of flight tests using average piloting technique.

1320 lbs 600 kg	Flaps position	Stall speed		Altitude loss ft
		KIAS	KCAS	
Wing level flight	Retracted (0°)	38	45	200
	Take-off (15°)	37	43	
	Landing (50°)	37	42	
Turn flight (coordinated turn 30° bank)	Retracted (0°)	44	50	200
	Take-off (15°)	43	48	
	Landing (50°)	43	47	

1320 lbs 600 kg	Flaps position	Stall speed		Altitude loss ft
		IAS [mph]	CAS [mph]	
Wing level flight	Retracted (0°)	44	52	200
	Take-off (15°)	43	49	
	Landing (50°)	43	48	
Turn flight (coordinated turn 30° bank)	Retracted (0°)	50	57	200
	Take-off (15°)	49	55	
	Landing (50°)	49	54	

6.1.3 TAKE-OFF DISTANCE

Conditions:

- Engine: max. take-off power
- Flaps: Take-off (15°)
- Carburetor preheating: OFF
- Airplane weight: 1268 lbs
- Altitude: 0 ft ISA
- Ambient air temperature: ISA

	Take-off run	Take-off distance to height of 50 ft (15 ft)
Dray concrete	620 ft	1440 ft
Grass	720 ft	1540 ft

Corrections:

- Influence of wind: Add 4% on every 1 kt (1.15 mph) of tail wind
- RWY inclination: Add 8% of the take-off run distance on 1% of runway inclination up the slope

6.1.4 LANDING DISTANCE

Conditions:

- Engine: IDLE
- Flaps: Landing 50°
- Carburetor preheating: OFF
- Airplane weight: 1268 lbs
- Altitude: 0 ft ISA
- Ambient air temperature: ISA

	Landing distance from height of 50 ft (15 ft)	Braked landing run
Dray concrete	1310 ft	590 ft
Grass	1250 ft	520 ft


Corrections:


- Influence of wind: Add 4.5 % on every 1 kt (1.15 mph) of tail wind
- RWY inclination: Add 8% of the landing run distance on 1% of runway Inclination down the slope

6.1.5 CLIMB PERFORMANCE

Conditions:

- Engine: MAXIMUM TAKE-OFF POWER
- Flaps: RETRACTED (0°)
- Carburetor preheating: OFF
- Airplane weight: 1320 lbs
- Vortex generators: Along the whole span of the wing
- Ambient air temperature: ISA

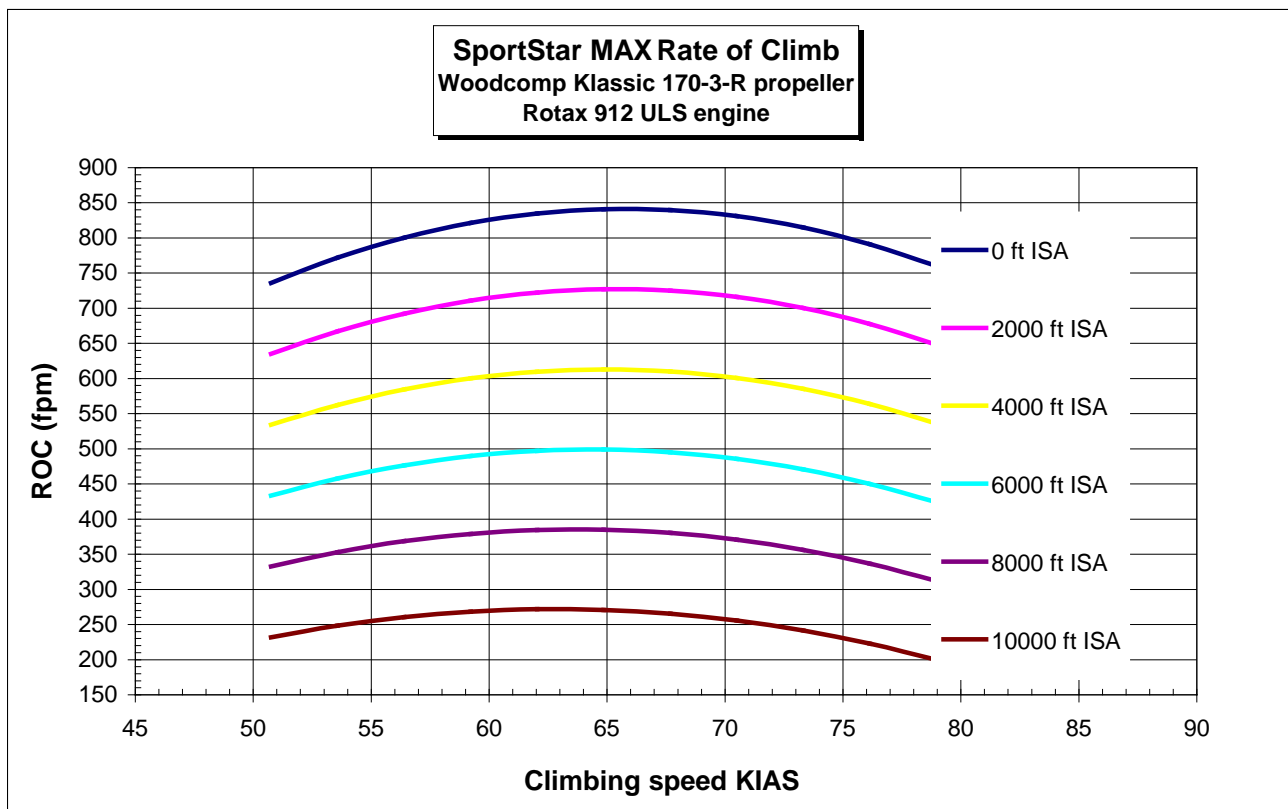

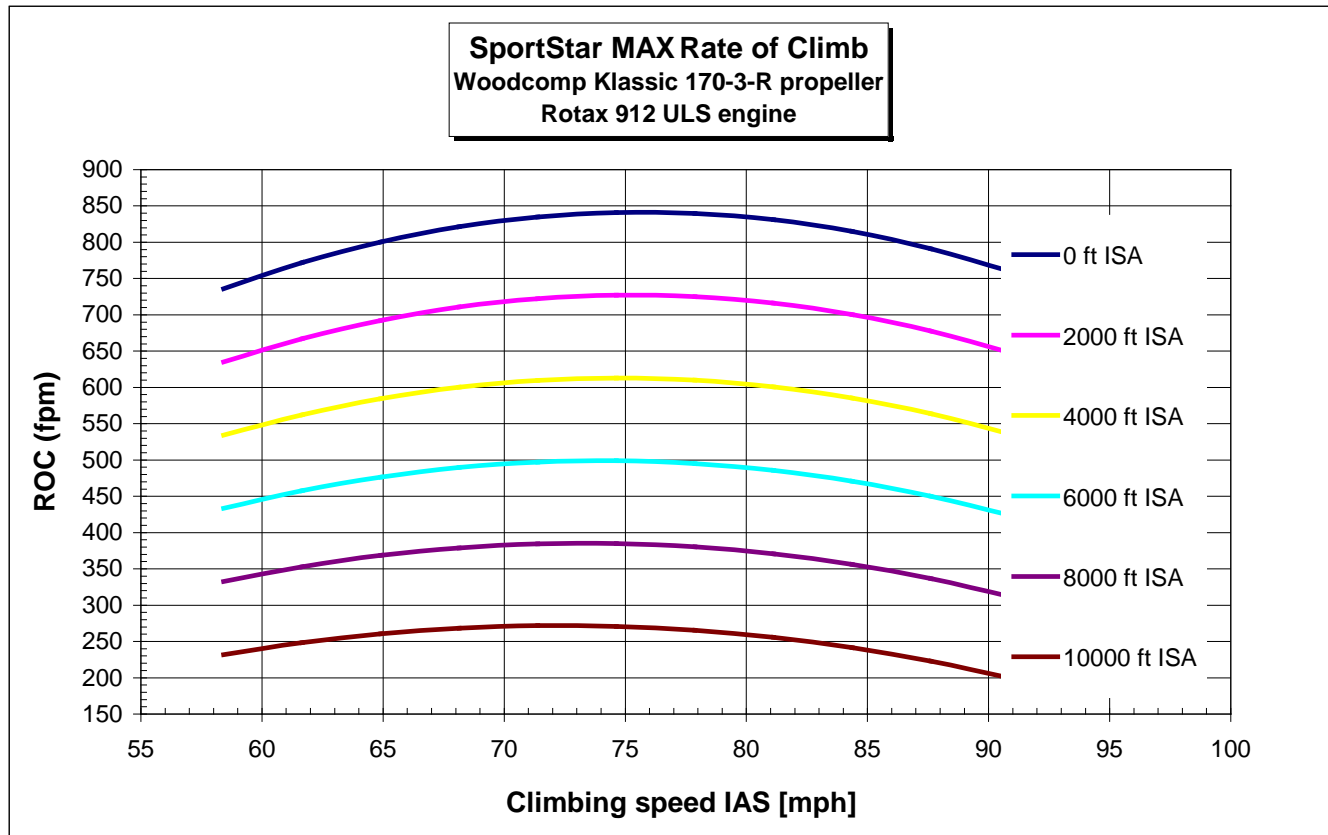


Best rate of climb for various altitudes is mentioned in the following table:

Altitude Hp [ft ISA]	Best rate of climb speed		Max. ROC [fpm]
	KIAS	IAS [mph]	
0 ft ISA	66	76	840
2000 ft ISA	65	75	730
4000 ft ISA	65	75	610
6000 ft ISA	64	74	500
8000 ft ISA	64	74	390
10000 ft ISA	63	72	270


6.2 Additional information

6.2.1 CRUISE

- Conditions:
- Flaps: Retracted (0°)
- Carburetor preheating: OFF
- Airplane weight: 1320 lbs (600 kg)
- Vortex generators Along the whole span of the wing
- Ambient air temperature: ISA

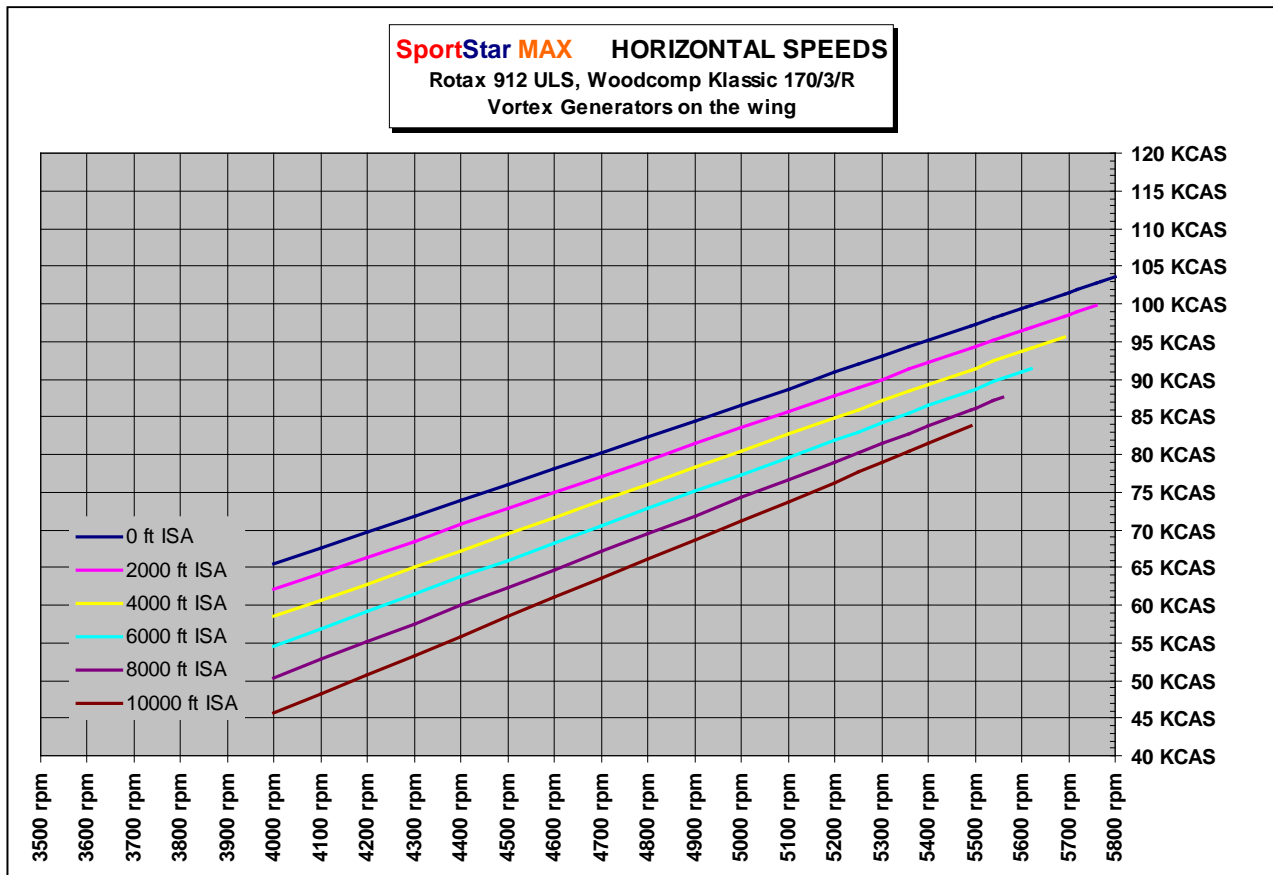

SportStar MAX HORIZONTAL SPEEDS
 Rotax 912 ULS, Woodcomp Klassic 170/3/R
 Vortex Generators on the wing

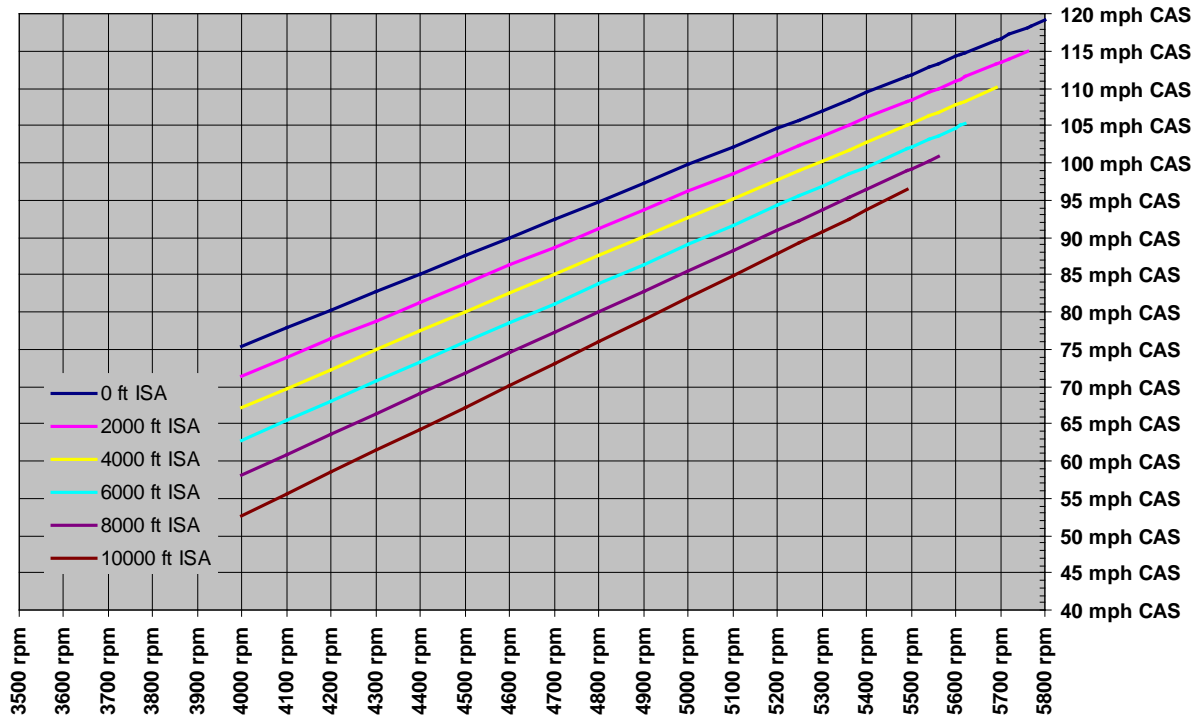

6.2.2 HORIZONTAL SPEEDS

In the following table states Indicated airspeeds (IAS), corresponding calibrated air speeds (CAS) and true air speeds (TAS) versus altitude, all for various engine speeds.

		55% MTV	65% MTV	75% MTV	MCP Maximum Continuous Power	MTP Maximum Takeoff Power (5 min.)
		4300 rpm	4800 rpm	5000 rpm	5500 rpm	5800 rpm
0 ft ISA	CIAS	71	83	88	99	106
	KCAS	72	82	87	97	103
	KTAS	72	82	87	97	104
2000 ft ISA	CIAS	67	80	84	96	
	KCAS	69	79	84	94	
	KTAS	71	82	86	97	
4000 ft ISA	CIAS	63	76	81	93	
	KCAS	65	76	80	91	
	KTAS	69	81	85	97	
6000 ft ISA	CIAS	58	72	77	90	
	KCAS	61	73	77	89	
	KTAS	67	80	85	97	
8000 ft ISA	CIAS	54	68	74	87	
	KCAS	58	69	74	86	
	KTAS	65	78	84	97	
10000 ft ISA	CIAS	48	64	70		
	KCAS	53	66	71		
	KTAS	62	77	83		

			55% MTV	65% MTV	75% MTV	MCP Maximum Continuous Power 5500 rpm	MTP Maximum Takeoff Power (5 min.) 5800 rpm
0 ft ISA	IAS	[mph]	82	96	101	114	122
	CAS	[mph]	83	95	100	112	119
	TAS	[mph]	83	95	100	112	119
2000 ft ISA	IAS	[mph]	77	91	97	111	
	CAS	[mph]	79	91	96	109	
	TAS	[mph]	81	94	99	112	
4000 ft ISA	IAS	[mph]	72	87	93	107	
	CAS	[mph]	75	88	93	105	
	TAS	[mph]	79	93	98	112	
6000 ft ISA	IAS	[mph]	67	83	89	104	
	CAS	[mph]	71	84	89	102	
	TAS	[mph]	77	92	97	112	
8000 ft ISA	IAS	[mph]	62	78	85	100	
	CAS	[mph]	66	80	85	99	
	TAS	[mph]	75	90	96	112	
10000 ft ISA	IAS	[mph]	56	74	81		
	CAS	[mph]	61	76	82		
	TAS	[mph]	71	89	95		

6.2.3 ENDURANCE

Conditions:

- Flaps: Retracted (0°)
- Carburetor preheating: OFF
- Airplane takeoff weight: 1320 lbs (600 kg)
- Airplane empty weight: 740 lbs (335 kg)
- Vortex generators Along the whole span of the wing
- Ambient air temperature: ISA

LOAD LIMITS	
Max.take-off weight	1320 lb
Empty weight	740 lb
Max.baggage weight	55 lb

PERMITTED CREW WEIGHT

		30 USGAL	25 USGAL	20 USGAL	15 USGAL	10 USGAL	5 USGAL
Baggage max.	55 lb	345 lb	375 lb	405 lb	435 lb	465 lb	495 lb
Baggage 1/2	28 lb	372 lb	402 lb	432 lb	462 lb	492 lb	522 lb
No baggage	0 lb	400 lb	430 lb	460 lb	490 lb	520 lb	550 lb

ENDURANCE AND RANGE		55% MCP	65% MCP	75% MCP	MCP Max.Continuous Power
Altitude 2000 ft ISA					
Engine speed	[rpm]	4300	4800	5000	5500
Fuel consumption	[USgal/h]	3,7	4,9	5,4	6,6
IAS	[knots]	67	80	84	96
	[mph]	77	91	97	111
CAS	[knots]	69	79	84	94
	[mph]	79	91	96	109
TAS	[knots]	71	82	86	97
	[mph]	81	94	99	112

Endurance at	30 USGAL	[h:m]	8:03	6:05	5:31	4:31
Range at		[NM]	570	500	480	440
		[miles]	660	580	550	510

Endurance at	25 USGAL	[h:m]	6:42	5:04	4:36	3:46
Range at		[NM]	470	410	400	370
		[miles]	540	470	460	430

Endurance at	20 USGAL	[h:m]	5:22	4:03	3:41	3:00
Range at		[NM]	380	330	320	290
		[miles]	440	380	370	330

Endurance at	15 USGAL	[h:m]	4:01	3:02	2:45	2:15
Range at		[NM]	280	250	240	220
		[miles]	320	290	280	250



Endurance at	10 USGAL	[h:m]	2:41	2:01	1:50	1:30
Range at		[NM]	190	170	160	150
		[miles]	220	200	180	170

Endurance at	5 USGAL	[h:m]	1:20	1:00	0:55	0:45
Range at		[NM]	90	80	80	70
		[miles]	100	90	90	80

6.2.4 BALKED LANDING CLIMB

Conditions:

- Engine: Maximum take-off power
- Carburetor preheating: OFF
- Flaps: Landing position (50°)
- Airplane weight: 1320 lbs (600 kg)
- Vortex generators Along the whole span of the wing
- Ambient air temperature: ISA

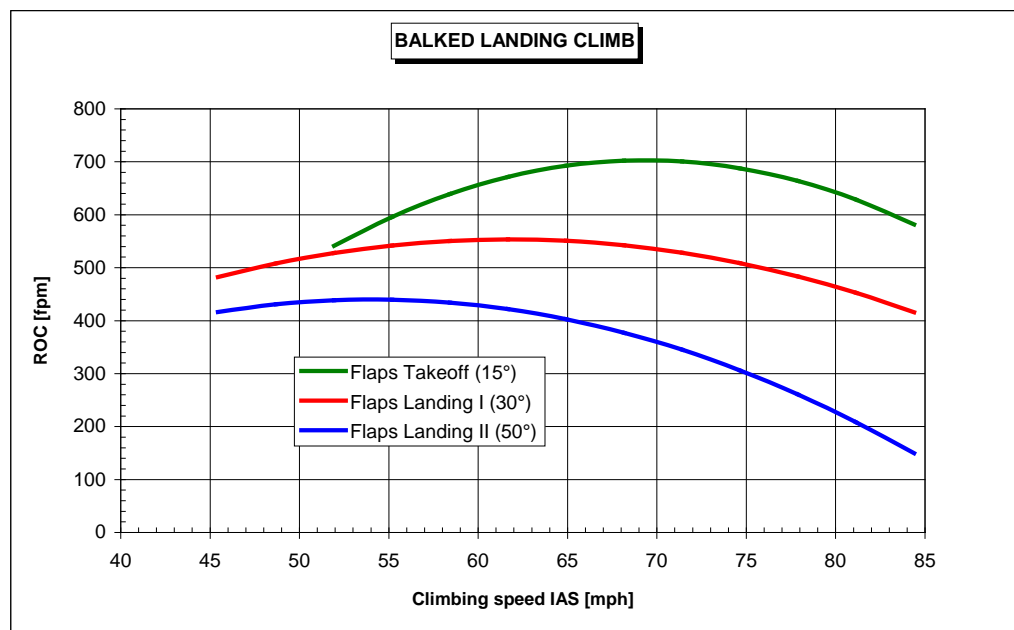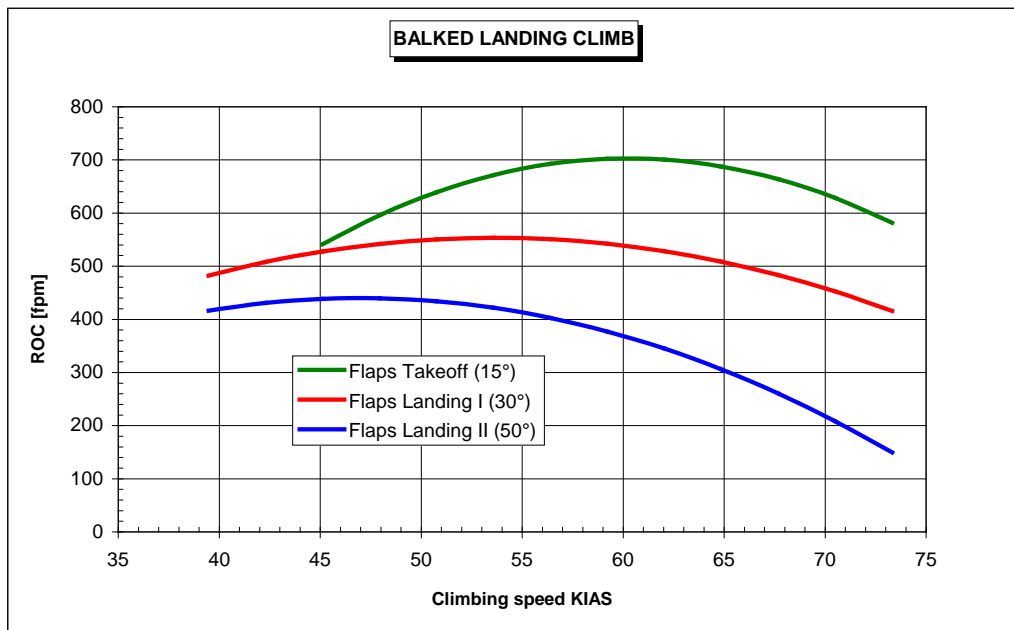

6.2.5 EFFECT ON FLIGHT PERFORMANCE AND CHARACTERISTICS

Flight performances and characteristics are not considerably affected by rain or insect stuck on the airplane surface.

6.2.6 DEMONSTRATED CROSSWIND PERFORMANCE

Maximum demonstrated speed of wind at airplane operation 24 kts (28 mph)

Maximum demonstrated speed of cross wind for take-off and landing

- Beginners and average pilots 10 kts (12 mph)
- Experienced pilots 15 kts (17 mph)

Maximum demonstrated speed of tail wind 6 kts (7 mph)

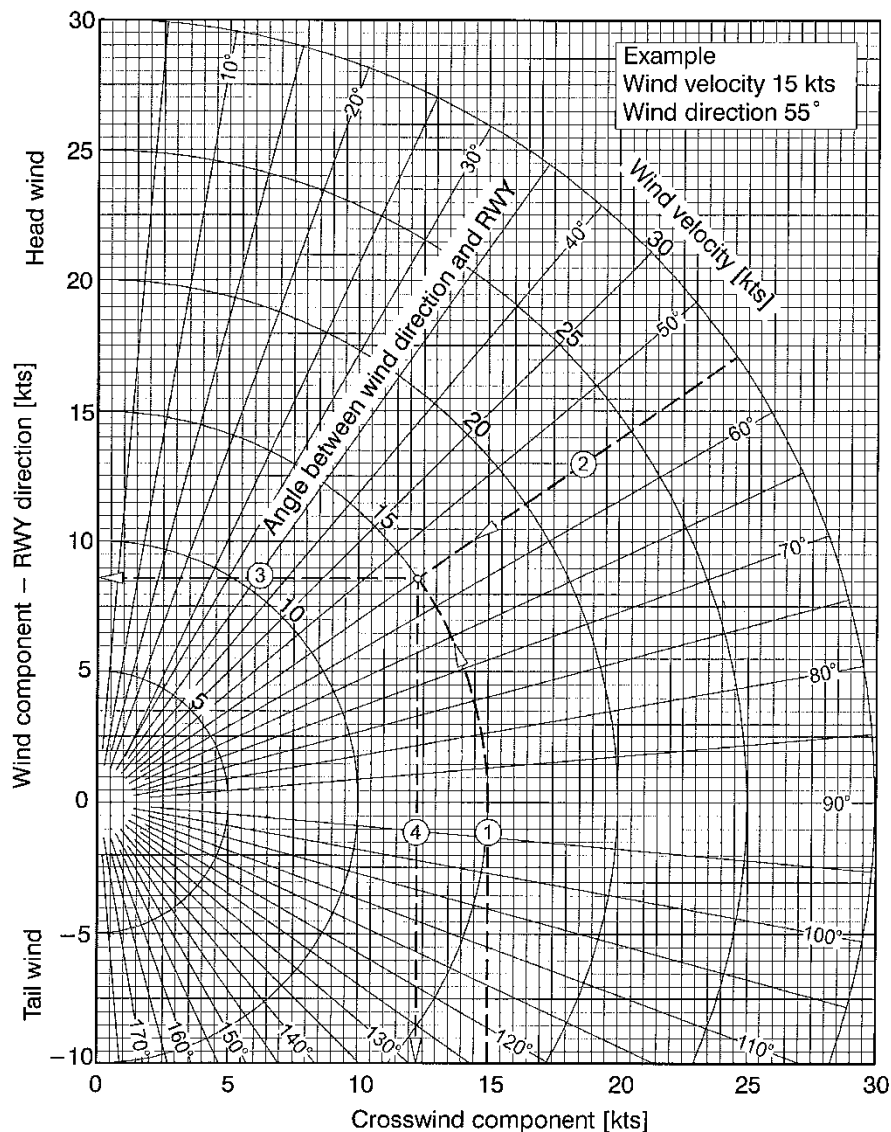


Figure 5-1 Influence of wind on take-off and landing

6.2.7 CEILING

Service ceiling (ROC 100 fpm) 13 000 ft

6.2.8 NOISE DATA

Not measured.

This space left intentionally blank

SECTION 6 - WEIGHT AND BALANCE

6.1	Introduction	60
6.2	Weight and Balance Record	60
6.3	Permitted Payload Range	61
6.4	Operational Weight and Balance Computation	62
6.4.1	Computational Procedure	62
6.5	Airplane Loading Schedule Chart	63
6.6	Table of Static Moments	64
6.7	Airplane Loading Graph.....	65
6.8	CG Moment Envelope	66
6.9	Operational Weight and CG Envelope	67

7.1 Introduction

This Section includes Weight and Balance Record of empty airplane, Permitted Payload Range within which the airplane may be safely operated, and a method to determine whether the operational weight and CG location will be within the permitted limits range.

Procedure for weighing the airplane and the calculation method for establishing the permitted payload range are contained in the Aircraft Maintenance and Inspection Procedures for the SportStar MAX Light Sport Aircraft.

6.2 Weight and Balance Record

[illegible]

6.3 Permitted Payload Range

MAXIMUM WEIGHT OF CREW [lb]				Airplane S/N:						20080610			MTOW [lb]:		1320	
Date	Empty weight [lb]	C.G. [% MAC]	Fuel volume gauge	1,0	0,8	0,6	0,4	0,3	0,2	Date	Signature					
			Fuel volume [USGal.]	30	25	20	15	10	5							
			Fuel weight [lb]	180	150	120	90	60	30							
			BAGGAGE [lb]													
6.3.2009	780	19,18	55	305	335	365	395	425	455							
			28	332	362	392	422	452	482							
			0	360	390	420	450	480	510							
			55													
			28													
			0													
			55													
			28													
			0													

6.4 Operational Weight and Balance Computation

An important part of preflight planning is to determine that the aircraft is loaded so its weight and CG location are within the allowable limits.

This is possible by using hereafter explained Loading graph method, using weights, arms, and moment indexes.

6.4.1 COMPUTATIONAL PROCEDURE

1. Record into the **Airplane Loading Schedule Chart** current empty weight and static moment of the airplane, which you read from the table 6.2 Weight and Balance Record.
2. Record the weight of crew, fuel, and baggage into the **Airplane Loading Schedule Chart**.
3. See the **Table of Static Moments** or **Airplane Loading Graph** to read static moments for given weights of crew, fuel, and baggage
4. Record found moments into the **Airplane Loading Schedule Chart**
5. Determine Take-off weight of the airplane – add together the airplane empty weight, crew, fuel, and baggage and record the result into the **Loading Schedule Chart**.
6. Check, whether the calculated Take-off weight does not exceed Airplane Maximum Take-off Weight 1320 lb.
If yes, then it is necessary to reduce weight of some of the useful load items (fuel, baggage).

WARNING

EXCEEDING MTOW MAY LEAD TO DETERIORATION OF SAFETY OF FLIGHT!

7. Determine Total Static Moment of loaded airplane – add together the static moment of empty airplane, crew, fuel, and baggage and record the result into the **Loading Schedule Chart**.
8. Plot Takeoff Weight and Total Static Moment into the **SportStar MAX CG Moment Envelope**.
9. Check, whether the intersection of Take-off weight horizontal line and Total Static Moment vertical line is inside the envelope.
If **YES**, then the flight may be safely performed as regards weight and balance.
If **NOT**, then it is necessary to change weight of some of the useful load items (crew, fuel, baggage) so that after a repeated computation the intersection of Take-off Weight and Total Static Moment will be inside the CG Moment envelope.

WARNING

SAFETY OF FLIGHT PERFORMED WITH THE AIRPLANE LOADED OUTSIDE PERMITTED LIMITS OF WEIGHT AND STATIC MOMENTS MAY BE DETERIORATED!

7.5 Airplane Loading Schedule Chart

Type / Model	SportStar MAX	Serial No.:		Registration:	
--------------	---------------	-------------	--	---------------	--


Loading Schedule Chart							
Your Aircraft			Sample Aircraft			Your Aircraft	
No	Item	Arm * (in)	Arm (in)	Weight (lb)	Moment/100 (lb-in)	Weight (lb)	Moment/100 (lb-in)
1.	Empty Airplane		10,39 in	740,75 lb	77,1 lb-in		
2.	Crew	21,45 in		399,04 lb	85,6 lb-in		
3.	Baggage (Max. 55 lb)	42,65 in		11,02 lb	4,7 lb-in		
4.	Fuel (Max. 32 USGAL)	26,75 in		60,41 lb	16,2 lb-in		
5.	Take off weight = Sum of weights 1-4 (MTOW 1268 lb) Total moment = Sum of moments 1-4			1211 lb	184 lb-in		

*) – for your empty airplane arm see Weight and Balance Record delivered with your airplane


7.6 Table of Static Moments

CREW		BAGGAGE		FUEL		
Weight (lb)	Moment/100 (lb-in)	Weight (lb)	Moment/100 (lb-in)	Quantity (USGAL)	Weight (lb)	Moment/100 (lb-in)
0	0,0	0	0,0	0,0	0,0	0,0
100	21,5	2	0,9	1,0	6,0	1,6
120	25,7	4	1,7	2,0	12,0	3,2
140	30,0	6	2,6	3,0	18,0	4,8
160	34,3	8	3,4	4,0	24,0	6,4
180	38,6	10	4,3	5,0	30,0	8,0
200	42,9	12	5,1	6,0	36,1	9,6
220	47,2	14	6,0	7,0	42,1	11,3
240	51,5	16	6,8	8,0	48,1	12,9
260	55,8	18	7,7	9,0	54,1	14,5
280	60,1	20	8,5	10,0	60,1	16,1
300	64,4	22	9,4	11,0	66,1	17,7
320	68,6	24	10,2	12,0	72,1	19,3
340	72,9	26	11,1	13,0	78,1	20,9
360	77,2	28	11,9	14,0	84,1	22,5
380	81,5	30	12,8	15,0	90,1	24,1
400	85,8	32	13,6	16,0	96,1	25,7
420	90,1	34	14,5	17,0	102,1	27,3
440	94,4	36	15,4	18,0	108,2	28,9
460	98,7	38	16,2	19,0	114,2	30,5
480	103,0	40	17,1	20,0	120,2	32,2
500	107,3	42	17,9	21,0	126,2	33,8
520	111,5	44	18,8	22,0	132,2	35,4
540	115,8	46	19,6	23,0	138,2	37,0
560	120,1	48	20,5	24,0	144,2	38,6
		50	21,3	25,0	150,2	40,2
		52	22,2	26,0	156,2	41,8
		54	23,0	27,0	162,2	43,4
		55	23,5	28,0	168,2	45,0
				29,0	174,3	46,6
				30,0	180,3	48,2
				31,0	186,3	49,8
				32,0	192,3	51,4


7.7 Airplane Loading Graph

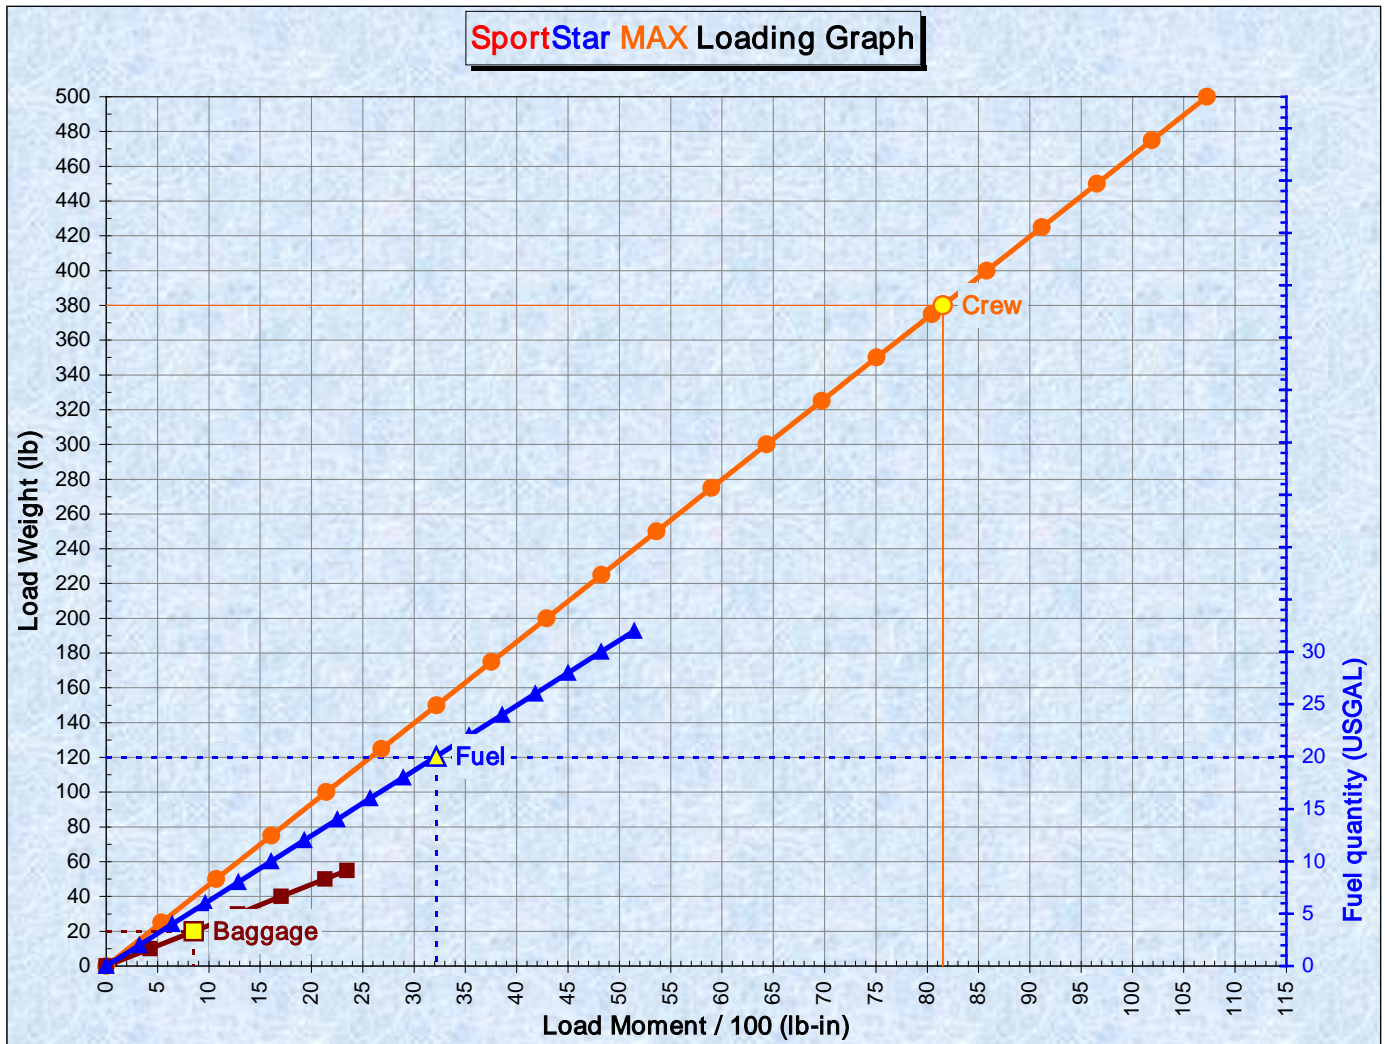

7.8 CG Moment Envelope

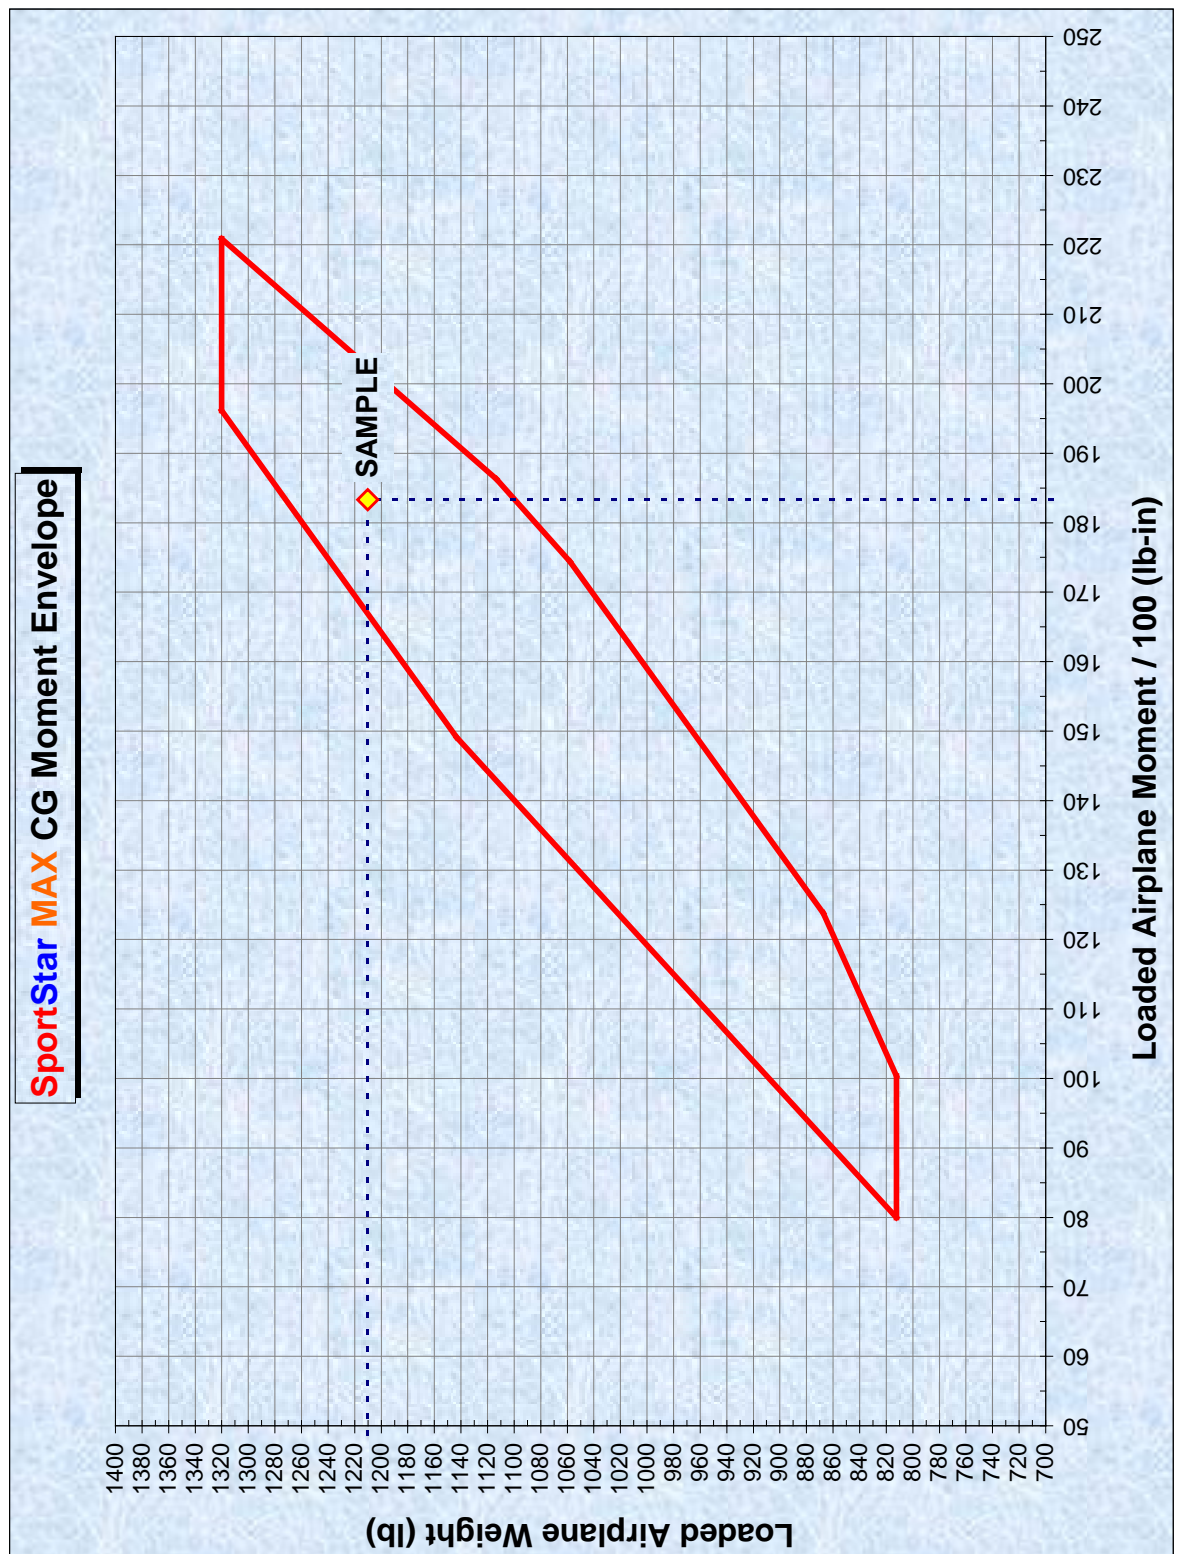

7.9 Operational Weight and CG Envelope

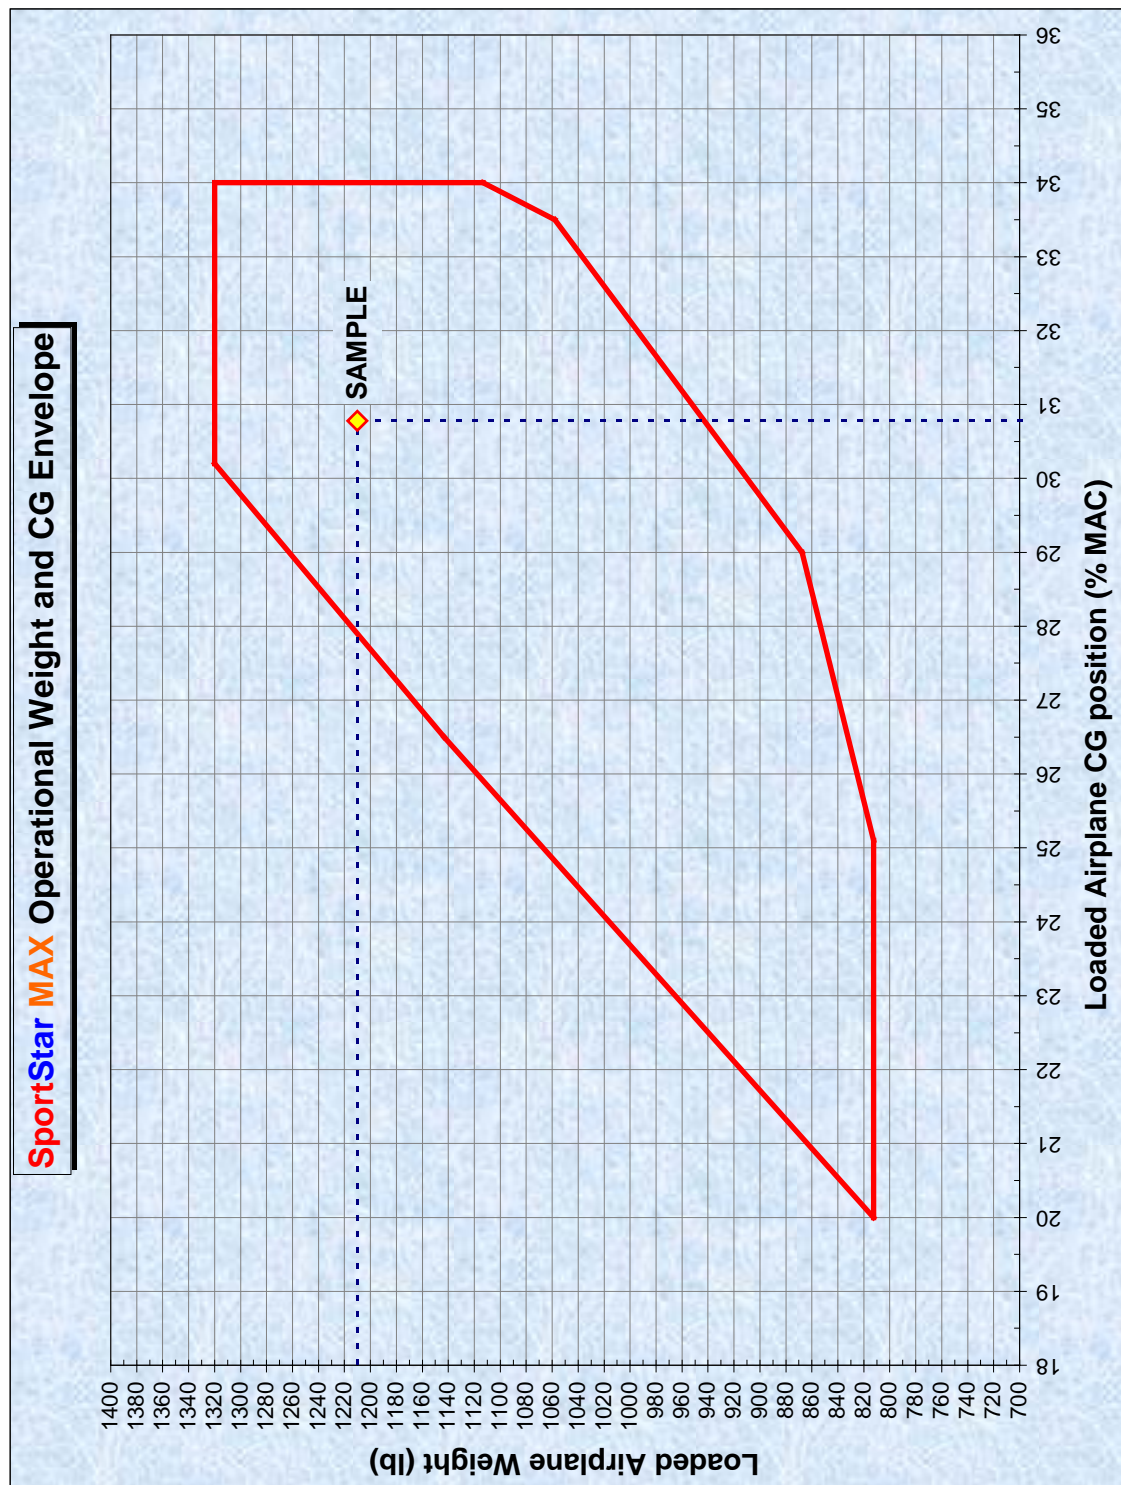

SECTION 7 - AIRPLANE AND SYSTEM DESCRIPTION

7.1	Introduction	69
7.2	Airframe	69
7.2.1	Fuselage	69
7.2.2	Wing	69
7.2.3	Horizontal tail unit (HTU)	69
7.2.4	Vertical tail unit (VTU)	69
7.3	Control	70
7.3.1	Longitudinal control	70
7.3.2	Lateral control	70
7.3.3	Rudder control	70
7.3.4	Elevator trim tab control	70
7.3.5	Aileron trim tab control	70
7.4	Controls in cockpit	71
7.5	Instrument panel	72
7.6	Markings and placards	72
7.7	Landing gear and brakes	72
7.7.1	Landing gear	72
7.7.2	Brakes	72
7.8	Seat and safety harnesses	72
7.9	Baggage compartment	72
7.10	Canopy	72
7.11	Power unit	73
7.11.1	General	73
7.11.2	Engine control	73
7.11.3	Engine instruments	73
7.11.4	Engine cooling system	74
7.11.5	Engine lubrication system	75
7.11.6	Engine intake system	75
7.11.7	Ignition system	76
7.12	Fuel system	76
7.12.1	Fuel tanks	76
7.12.2	Fuel selector	76
7.12.3	Fuel filter	77
7.12.4	Indication of fuel quantity	77
7.13	Electrical system	78
7.13.1	Lighting	78

7.14 Pitot-static system	79
7.15 Supplementary equipment	80
7.15.1 Ventilation and heating system.....	80
7.16 Navigation and communication equipment.....	80

7.1 Introduction

This section describes systems of the airplane and its operation.

7.2 Airframe

The airframe of the SportStar MAX airplane is a combination of a semimonocoque structure consisting of metal reinforcement, frames and duralumin sheet skin, with a composite back side of fuselage and composite canopy.

7.2.1 FUSELAGE

The fuselage is a combination of semimonocoque structure consisting of reinforcements and duralumin skin, with a composite back side of fuselage and composite canopy . Fuselage section is rectangular in the lower part and elliptic in the upper part. The fin is an integral part of fuselage. The cockpit for two-member crew is located in the middle part of the fuselage that is accessible after uncovering the single-piece organic glass composite canopy. The engine compartment in the front part of the fuselage is separated from the cockpit by the steel firewall to which the engine bed is attached.

7.2.2 WING

The wing is of a rectangular shape, single-spar structure with the auxiliary spar with suspended ailerons and split wing flaps. Riveting is used for connecting individual structural elements. Fiber-glass wing tips are riveted on the wing ends. There is an integral fuel tank inside each wing half, in the section between the main and auxiliary spar at the wing root.

7.2.3 HORIZONTAL TAIL UNIT (HTU)

The VTU of conventional type consists of the stabilizer and elevator with the trim tab. Single-spar structure of HTU consists of duralumin ribs, spar and skin. Top view of HTU is of rectangular shape.

7.2.4 VERTICAL TAIL UNIT (VTU)

VTU is of trapezoidal shape. Its fin is an integral part of the fuselage. The rudder is suspended on the fin by means of two hinges. The VTU structure consists of the duralumin spar and skin.

7.3 Control

Airplane control consists of ailerons, elevator and rudder. Directional control is connected by means of pull rods with nose landing gear control. Main landing gear brakes are controlled by pedals of directional control.

Airplane is equipped with dual control enabling flight with two-member crew.

7.3.1 LONGITUDINAL CONTROL

Longitudinal control is actuated by the control stick. Longitudinal movement of control stick is transferred to the elevator by mechanical system of pull rods and levers.

7.3.2 LATERAL CONTROL

Lateral control is actuated by the control stick. From the control stick the movement is transferred through the system of levers and pull rods to ailerons.

7.3.3 RUDDER CONTROL

Rudder control is controlled by pedals of foot control. The rudder is interconnected with foot control pedals by cable system.

Foot control pedals adjustable into three positions can be installed as an option.

Way of adjustment of rudder pedals:

1. Release the pin from the adjusting groove by pressing lever.
2. Set pedal to required position and release lever.
3. Check on the pin locking-on in the adjusting groove

WARNING

RIGHT AND LEFT PEDAL OF RUDDER CONTROL MUST BE ADJUSTED IN THE SAME POSITIONS AND SECURED!

7.3.4 ELEVATOR TRIM TAB CONTROL

The elevator trim tab is controlled by the lever located in between the pilot seats. The control lever is interconnected with the trim tab by means of Bowden-cables.

7.3.5 AILERON TRIM TAB CONTROL

Electric aileron trim tab control can be installed optionally. Control switches are located on the control stick, trim tab position indicator is located on the instrument panel.

7.4 Controls In Cockpit

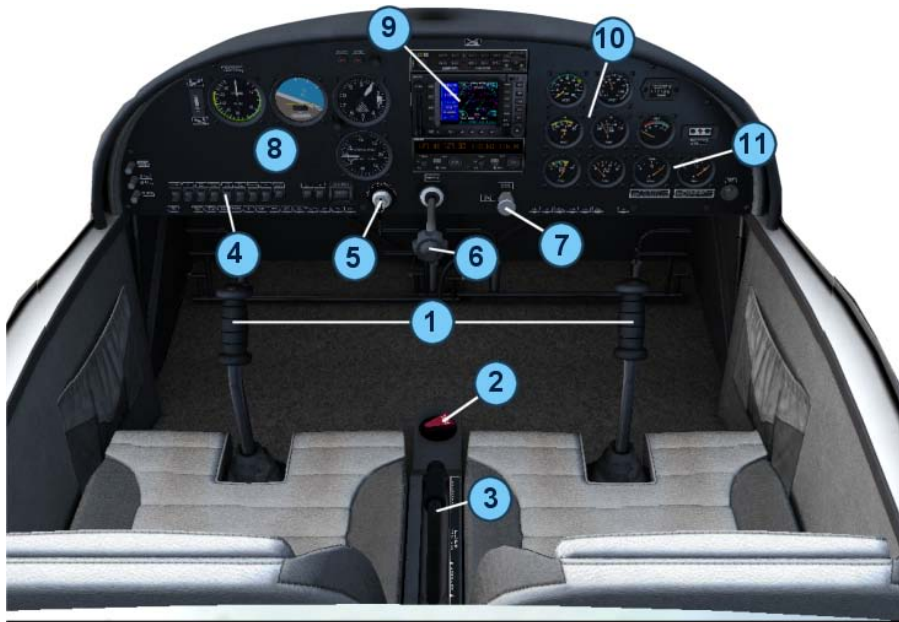


Fig. 7.1 Cockpit Controls

- 1. Control Stick
- 4. Electrical/Light Switches
- 7. Choke
- 10. Engine Instruments

- 2. Fuel Selector
- 5. Ignition
- 8. Primary Instruments *
- 11. Fuel Indicators

- 3. Flaps Control
- 6. Throttle Knob
- 9. GPS/Avionics **

* **Primary Instruments**

ADI - Artificial Horizon
Gyro
Airspeed Indicator
Altimeter
Vertical Speed Indicator

** **Avionics**

Audio Panel/Marker Beacons
GNS 480 GPS/WAAS/NAV-COM 1
NAV-COM 2 Radio

7.5 Instrument panel

Instrument panel is shown in Fig. 7.1.

7.6 Markings and placards

See Section 2 - Limitations and Markings.

7.7 Landing gear and brakes

7.7.1 LANDING GEAR

The airplane is equipped with a fixed nose landing gear. Main landing gear legs are produced from composite spring. Nose landing gear leg is welded from two pieces - the tube and the yoke- in which the nose wheel is mounted. The nose landing gear is spring-loaded by a rubber rope. The nose wheel is steerable, wheel control is coupled with rudder control by means of two pull rods. Wheels can be fitted with fiber-glass aerodynamic pants.

7.7.2 BRAKES

The SportStar MAX airplane is equipped with disk hydraulic brakes on main landing gear wheels. Brake system is composed of toe-brake pedals (these are a part of rudder control pedals), brake pumps, brake fluid reservoir, brake fluid central bottle on the firewall, hoses for leading brake liquid, brake yokes with wheel cylinders and brake pads. By depressing the brake pedals compression of the brake pumps will occur, which generates pressure in the brake circuit and hydraulic cylinders press the brake pads onto the brake disks. Braking pressure can be regulated only by the force applied to the brake pedals.

7.8 Seat and safety harnesses

The SportStar MAX is a two-seat airplane with side-by-side seats. The seats are fixed, non-adjustable, and fitted with light upholstery.

Each of the seats is fitted with a four-point safety harness which is composed of safety belts, shoulder straps and lock. The safety harness is anchored in the fuselage sides behind the seats and on the seat sides.

7.9 Baggage compartment

The baggage compartment is positioned behind the seat rests. The maximum weight of the baggage compartment is 55 lbs (25 kg), as stated on the placard in the baggage compartment.

The baggage compartment is fitted with rubber net for baggage fixation.

WARNING

It is prohibited to use a space behind baggage compartment for additional stowage. This is due to airplane aft C.G. limit.

7.10 Canopy

The cockpit canopy is of a teardrop shape. The framework is composed of composite structure on which the organic glass canopy is stuck.

The canopy is attached to the fuselage in the front part by two swivel pins by means of which it can be moved forward. In order to make opening easier, the actual weight of canopy is balanced by two gas struts.

7.10.1 LOCK

The canopy is provided with an automotive lock in the rear upper part of the tip-up frame and key lock on the top of rear fixed frame.

Maintenance of automotive lock: Spray the lock with WD-40 spray annually from time to time

Adjustment: Release the socket wrench screws on back of the lock, adjust lock position and tight the socket wrench screws

7.11 Power unit

7.11.1 GENERAL

The ROTAX 912 ULS (100 hp) engine is used to power SportStar MAX airplane.

The ROTAX 912 is a four-cylinder, four-stroke engine with opposite cylinders, central cam shaft and OHV valve mechanism.

The on-ground adjustable, composite, 3-blade propeller WOODCOMP KLASSIC 170/3/R is mounted on the engine.

7.11.2 ENGINE CONTROL

Engine power is controlled by means of the THROTTLE knob, which is located in the middle of the instrument panel. It controls the engine power range from idle up to maximum take-off. The engine power controller is mechanically interconnected with the flap on the carburetors.

If the lever is fully pushed in, this position corresponds to maximum engine power. If the lever is fully pulled out, this position corresponds to idle.

7.11.3 ENGINE INSTRUMENTS

The following analog instruments (Fig. 7-1 #10) are located on the instrument panel for monitoring engine performance.

1. **RPM indicator** - Working range of the RPM indicator is 0 - 6000 RPM.
2. **Manifold Pressure** - Working range 0-40 PSI
3. **Oil Temperature** - Working range of oil thermometer is 120 ÷ 300°F.
4. **Cylinder Head Temperature** - The cylinder head thermometer transmitter senses temperature of cylinder No. 3. Working range of the cylinder head thermometer is 120 ÷ 300°F.
5. **Oil Pressure** - Working range is 0 ÷ 150 PSI.
6. **Fuel Pressure** - Working range 0-15 PSI



7.11.4 ENGINE COOLING SYSTEM

Engine cooling is combined, cylinder heads are cooled by water, cylinders are cooled by air. Cooling circuit of cylinder heads is designed as a closed system containing pump, expansion reservoir (1) with pressure closure (3), cooler of cooling liquid (2) and drainage reservoir (4). Scheme of cylinder head cooling system is shown in Fig. 7–2.

When changing, the cooling liquid is filled up through the cap of expansion reservoir (1), during airplane operation it is replenished into drainage reservoir (4) between the lines of maximum and minimum level.

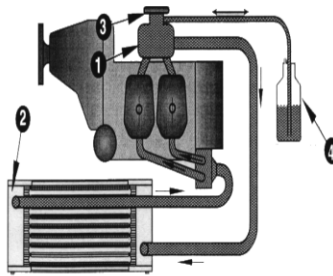


Figure 7–2 Scheme of cylinder head cooling system

7.11.5 ENGINE LUBRICATION SYSTEM

The engine lubrication system is performed with the dry crank case. The engine lubrication system is equipped with an oil pump (1) ensuring oil feeding from the reservoir (4) located on the fire wall through the oil cooler (5) and the oil cleaner (6) to the lubricated points of engine. The pressure sensor (2) is located behind the oil pump. The oil reservoir is aerated by the hose (7) which is led under the airplane. Oil pressure and temperature are indicated on instruments in right side of the instrument panel. Oil is replenished through the lid in the upper part of the oil reservoir.

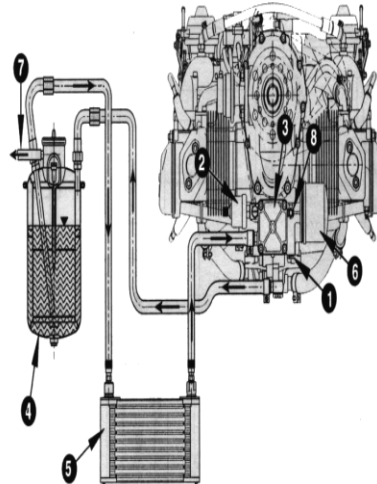


Figure 7–3 Scheme of engine lubrication system

7.11.6 ENGINE INTAKE SYSTEM

The engine intake system ensures delivery of sufficient air into engine. Air is taken into the engine through openings on the engine covers through the air filters.

The intake system is equipped with a carburetor heating system. Hot air from the heat exchanger (located on the exhaust collector) is taken to the mixing chamber. Amount of in-taken hot air is regulated by flaps in mixing chamber inlets. Flaps are controlled by the CARBURETTOR PREHEATER knob on the left side of the instrument panel.



7.11.7 IGNITION SYSTEM

The engine is equipped with the double contactless ignition system. Each ignition circuit has own source of energy, control unit, 2 ignition coils and 4 spark plugs. It is fully autonomous on the other circuit of accumulator. High voltage current is distributed to the spark plugs through high-voltage cables. Ignition sequence of individual engine cylinders:

Ignition circuits are controlled by the ignition switch on the instrument panel.
Positions of ignition switch:

OFF	Engine ignition is off
R	Only ignition circuit B is on
L	Only ignition circuit A is on
BOTH	Both circuits are on
START	Both circuits are on and starter is cranking the engine

7.12 Fuel system

The Fuel system maintains fuel flow into the engine. The fuel system of the SportStar MAX airplane is composed of integral fuel tanks, fuel line, fuel selector, fuel filter, mechanical fuel pump - located on the engine (auxiliary electrical fuel pump can be installed), a distribution pipe for delivery of fuel to the engine, with a fuel return branch, fuel gauges and fuel tank drain valves.

7.12.1 FUEL TANKS

Fuel is stored in the wing integral tanks. Each tank is fitted with air venting (output is under the wing tip) and a drain valve on the bottom side of the wing. Fuel is led from the tanks through the hoses to the fuel selector located on a central console under the instrument panel and then through a fuel filter to the engine pump and carburetors. A fuel return hose goes from the fuel pump into the left tank, which is considered the "primary" tank. See figure 7-4 for a schematic of the fuel system.

7.12.2 FUEL SELECTOR

The fuel selector (Fig. 7-1 #2) controls fuel tank selection and fuel delivery interruption in case of engine fire or airplane parking.

To move the selector from the OFF (closed) position turn the handle from the OFF position to the left. The handle can be freely moved between LEFT and RIGHT position.

Move the selector to the OFF (closed) position to block fuel flow to the engine.



7.12.3 FUEL FILTER

The fuel filter separates all mechanical impurities from fuel. The fuel filter is under the cockpit on the left airframe panel.

7.12.4 INDICATION OF FUEL QUANTITY

Fuel quantity is measured by a float fuel gauge transmitter in each tank and indicated on the fuel gauges on the instrument panel. ➡

The left hand fuel gauges indicates fuel quantity in the left (primary) tank, the right hand indicator shows fuel level for the right tank.

True fuel quantity is indicated only on ground and in level flight and it takes approx. 2 minutes to level fuel after transition from climb/descent.

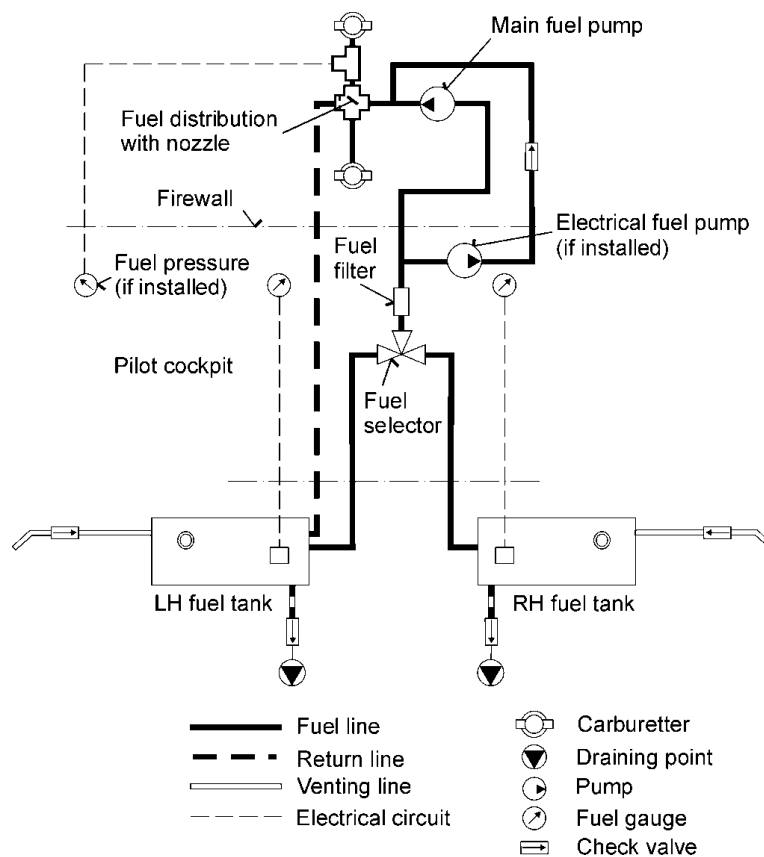


Figure 7-4 Scheme of fuel system

7.13 Electrical system

The airplane is equipped with a 14 Volt DC electrical system. A 250 Watt generator, feeding by a drive belt from the engine, is the primary source of electrical energy. The secondary source of energy is the 12V/16Ah battery that is located in the engine compartment on the firewall. It is used for engine starting and in case of generator failure as an emergency source of energy and also serves as the smoothing filter of power system.

DC voltage is distributed to individual systems by the main bus bar. Each system is protected by a circuit breaker. In case of circuit overload the circuit breaker pops out.

CAUTION

DO NOT USE CIRCUIT BREAKERS FOR NORMAL SWITCHING OFF OF THE SYSTEMS

After switching the MASTER SWITCH on and by turning the ignition key to the START position the starter is activated. The starter is power supplied from the accumulator before engine start. After the engine has been started and idle RPM reached, generator starts supplying current into electrical network.

7.13.1 LIGHTING

The airplane is equipped with an external lighting.

External lighting is composed of position lights and anti-collision beacons which are located in wing tip and landing headlight which is located in left wing leading edge or in the lower engine cowl.

The lights are switched by the POS. LIGHTS switch on the instrument panel switch bank (Fig. 7-1 #4). Landing headlight is switched by the LDG LIGHT switch.



7.14 Pitot-static system

The airplane is equipped with a pitot-static tube for sensing static and total pressure. It is located under the left half of the wing. Total pressure is sensed through the opening in the Pitot-static tube face. Static pressure is sensed through openings on the tube circumference. The system of static air pressure distribution to individual instruments is provided by means of flexible plastic hoses. Transparent drain reservoirs are located in the pressure branch of static and total pressure on the left fuselage side on the bottom next to wing leading edge.

Static pressure is led to altimeter, airspeed indicator, and altitude encoder. Total pressure is led only to the airspeed indicator. The pitot tube is heated.

For scheme of IFR pitot-static system refer to IFR Supplement to this AOI.

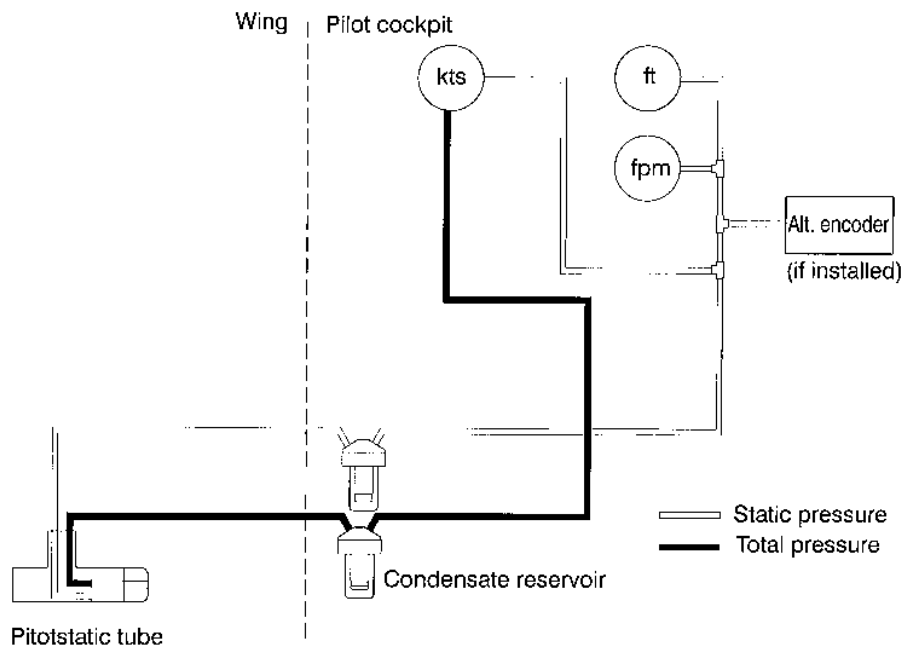


Figure 7–5 Scheme of pitot-static system

7.15 Supplementary equipment

7.15.1 VENTILATION AND HEATING SYSTEM

Cockpit ventilation is ensured by 2 vents located on the left and right of the tip-up canopy frame. Vents are connected to the NACA scoops through tip-up canopy frame front flaps.

Cockpit heating is provided by air conducted through a hose guided from a fiberglass collector behind the engine radiator into the heat exchanger and then into the mixture flap on the firewall and further through a directional flap to the cockpit floor or to the hot air outputs through the instrument panel cover as well as into the hollow spaces of the tip-up frame for defrosting. Hot/cold air temperature is regulated by the **HOT AIR** knob on the instrument panel.

Defog / defrosting of windshield and sides is ensured by hot air conducted from a cold/hot air mixture flap on the firewall into the tip-up canopy frame and then through a row of holes onto the glass.

7.16 Navigation and communication equipment

Please refer to the respective Pilot Handbooks for the GNS 480 and NAV/COM radio.

SECTION 8 - END USER LICENSE AGREEMENT

IMPORTANT-READ CAREFULLY: BY INSTALLING THIS SOFTWARE YOU ARE AGREEING TO THE TERMS SPECIFIED BELOW!

This KC Flight Shop End User License Agreement ("EULA") is a legal agreement between you (either an individual or a single entity) and KC Flight Shop, for the software product. "SOFTWARE PRODUCT" is hereby identified as, and includes, any or all computer software, associated media, printed materials, and "online" or electronic documentation associated with it. By installing, copying, or otherwise using the SOFTWARE PRODUCT, you agree to be bound by the terms of this EULA. If you do not agree to the terms of this EULA, do not install or use the SOFTWARE PRODUCT.

SOFTWARE PRODUCT LICENSE

The SOFTWARE PRODUCT is protected by copyright laws and international copyright treaties, as well as other intellectual property laws and treaties. The SOFTWARE PRODUCT is licensed, not sold. KC Flight Shop maintains ownership of the software.

1. GRANT OF LICENSE.

-Installation and usage

KC Flight Shop grants to you the rights to install and use the software, for your own personal use only, on one (1) computer. Installation on a second computer or any number of additional computers is prohibited. The license may be transferred to another computer with permission from KC Flight Shop provided you can demonstrate that the software has first been removed from the original computer. KC Flight Shop can provide you with a utility which will remove all files and the license from the original computer and create a data file demonstrating this. You may inquire with KC Flight Shop regarding this by contacting us in the manner described below under **Contacting KC Flight Shop**. Other arrangements on subsequent to evaluation by KC Flight Shop can also be made, and inquiries are welcome.

- Reproduction and Distribution.

You may NOT reproduce or distribute any number of copies of the SOFTWARE PRODUCT. Webmasters may NOT upload the SOFTWARE PRODUCT to their web sites, or distribute the SOFTWARE PRODUCT in any way. At no time may the SOFTWARE PRODUCT be placed on a web site, newsgroup, Internet mailing list, or Bulletin Board (BBS), or copy/redistribute the software and documentation by any other means.

2. DESCRIPTION OF OTHER RIGHTS AND LIMITATIONS.

-Limitations on Reverse Engineering, Decompilation, and Disassembly.

You may not reverse engineer, decompile, or disassemble the SOFTWARE PRODUCT.

- Use of "key generator" or other license "hacking" tools.

Use of any such utility or tool on your system, designed to circumvent the KC Flight Shop license/license system for this or any other KC Flight Shop aircraft shall be considered a violation of this agreement and cause for termination of this license agreement and all other KC Flight Shop licenses.-

Separation of Components.

The SOFTWARE PRODUCT is licensed as a single product. Its component parts may not be separated for use on more than one computer.

- Software Transfer.

You may **not** transfer this license without the specific permission of KC Flight Shop.

- Termination.

Without prejudice to any other rights, KC Flight Shop may terminate this EULA if you fail to comply with the terms and conditions of this EULA. In such event, you must destroy all copies of the SOFTWARE PRODUCT and all of its component parts.

3. COPYRIGHT

All title and copyrights in and to the SOFTWARE PRODUCT (including but not limited to any images, photographs, animations, video, audio, music, text, and "applets" incorporated into the SOFTWARE PRODUCT) and any copies of the SOFTWARE PRODUCT are owned by KC Flight Shop. The SOFTWARE PRODUCT is protected by copyright laws and international treaty provisions. Therefore, you must treat the SOFTWARE PRODUCT like any other copyrighted material except that you may install the SOFTWARE PRODUCT on a single computer provided you keep the original solely for backup or archival purposes.

4. U.S. GOVERNMENT RESTRICTED RIGHTS

The SOFTWARE PRODUCT and documentation are provided with RESTRICTED RIGHTS. Use, duplication, or disclosure by the Government is subject to restrictions as set forth in subparagraph (c)(1)(ii) of the Rights in Technical Data and Computer Software clause at DFARS 252.227-7013 or subparagraphs (c)(1) and (2) of the Commercial Computer Software-Restricted Rights at 48 CFR 52.227-19, as applicable.

Manufacturer is KC Flight Shop, Olathe, Kansas.

5. MISCELLANEOUS

If you acquired this product in the United States, this EULA is governed by the laws of the State of Kansas.

If you acquired this product in Canada, this EULA is governed by the laws of the Province of Ontario, Canada. Each of the parties hereto irrevocably attorns to the jurisdiction of the courts of the Province of Ontario and further agrees to commence any litigation, which may arise hereunder in the courts located in the Judicial District of York, Province of Ontario.

If this product was acquired outside the United States, then local law may apply.

Should you have any questions concerning this EULA, or if you may do so in the manner described below under **Contacting KC Flight Shop**

6. LIMITED WARRANTY

NO WARRANTIES. KC Flight Shop expressly disclaims any warranty for the SOFTWARE PRODUCT. The SOFTWARE PRODUCT and any related documentation is provided "as is" without warranty of any kind, either express or implied, including, without limitation, the implied warranties or merchantability, fitness for a particular purpose, or non infringement. The entire risk arising out of use or performance of the SOFTWARE PRODUCT remains with you.

7. NO LIABILITY FOR DAMAGES. In no event shall KC Flight Shop be liable for any damages whatsoever (including, without limitation, damages for loss of business profits, business interruption, loss of business information, or any other pecuniary loss) arising out of the use of or inability to use this KC Flight Shop product, even if KC Flight Shop has been advised of the possibility of such damages. Because some states /jurisdictions do not allow the exclusion or limitation of liability for consequential or incidental damages, the above limitation may not apply to you.

Any attempts to distribute or alter the files without permission of KC Flight Shop will be considered an act of piracy and will be dealt with according to domestic, or as applicable, international law.

8. U.S. Government Restricted Rights. The Software is a "commercial item," as that term is defined at 48 C.F.R. 2.101 (OCT 1995), consisting of "commercial computer software" and "commercial computer software documentation," as such terms are used in 48 C.F.R. 12.212 (SEPT 1995). Consistent with 48 C.F.R. 12.212 and 48 C.F.R. 227-7202-1 through 227-7202-4 (JUNE 1995), all U.S. Government End Users acquire the Software with only those rights set forth herein.

Contacting KC Flight Shop. Please use our E-mail message terminal for support inquires. You can access it from our front page or from our Tech Support page. This will insure that your support request will go to the right place, and the information on the forms will provide us with the minimal information we need to assist you.

Copyright© 2011 KC Flight Shop. All rights reserved.

